

## New EMS Units



2016 Freightliner/PL Custom



## Specification Chart

• Engine	Cummins ISB 240 HP
• Brakes	Antilock – Disc - HYDRAULIC
• Front Axle	8,000 lbs GAWR
• Rear Axle	12,000 lbs GAWR
• Curb Weight	15,300 lbs <b>EMPTY</b>
• Unit Height	9' 6"
• Unit Length	24' 5"
• Unit Width	9' 6"
• Tire Pressure	Front 85psi    Rear 75psi
• Coolant	11 Gallons Purple w/SCA
• Engine Oil	20qts 15w40
• Transmission Fluid	10.6qts Transynd
• Power Steering Fluid	5qts Dexron III
• Brake Fluid	5pts DOT 3
• Diesel Exhaust Fluid	6 Gallons DEF

## Braking System

- ALL 2016 EMS units will be equipped with All-wheel **HYDRAULIC** Disc Brakes
- Visualize fluid level through the translucent reservoir
- Backlighting with a flashlight may improve visibility
- **DO NOT** conduct DOT Air Brake Test

 


### Master Cylinder

Check BOTH sides of the reservoir during your daily apparatus check. DO NOT remove caps and only add fluid upon direction from CMF.

## Washer Fluid Reservoir

- Now located under the hood on the passenger side of the unit

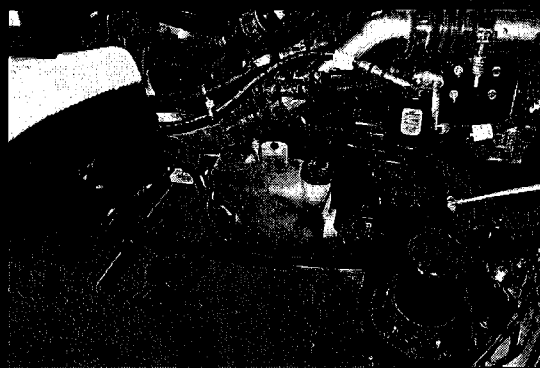


## Auxiliary Braking Device

# CAUTION

This unit is equipped with an Exhaust Brake.

The Exhaust Brake will not be used in low traction or slippery conditions.
 
## Transmission Fluid Check

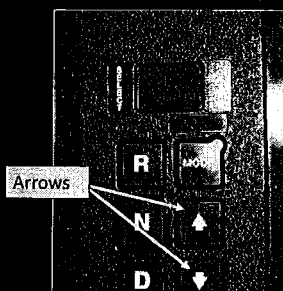



- The Transmission Fluid level may be checked in the cab through the keypad selector.
- The engine must be running at idle and the unit must be on level ground.
- The engine must idle at least five minutes from a cold start.
- The transmission must heat to at least 140 degrees F.
- Push both the up and down arrows simultaneously on the keypad.

## Transmission Fluid Check



  - After simultaneously pushing both buttons, the symbol "OL" will display on the screen.
- OL will be followed by OK, -1 thru -7, or +1 thru +7. The - indicates under filled and the + indicates overfilled. The numeral indicates the number of quarts.
- Any other message indicates a problem and CMF should be notified.
- Always confirm the digital reading on the dipstick BEFORE adding fluid.
- ONLY use Trans-Synd Fluid.


## Reverse Camera

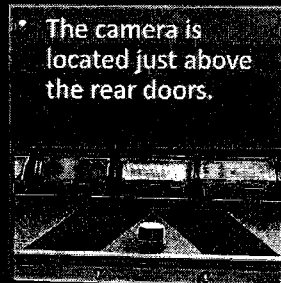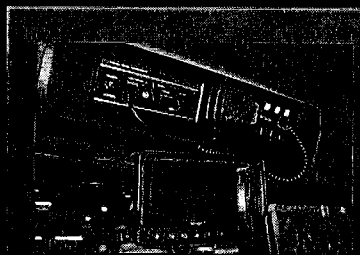

- The video screen is located at ceiling level in the center of the unit.

- The camera is located just above the rear doors.

## Cab Features

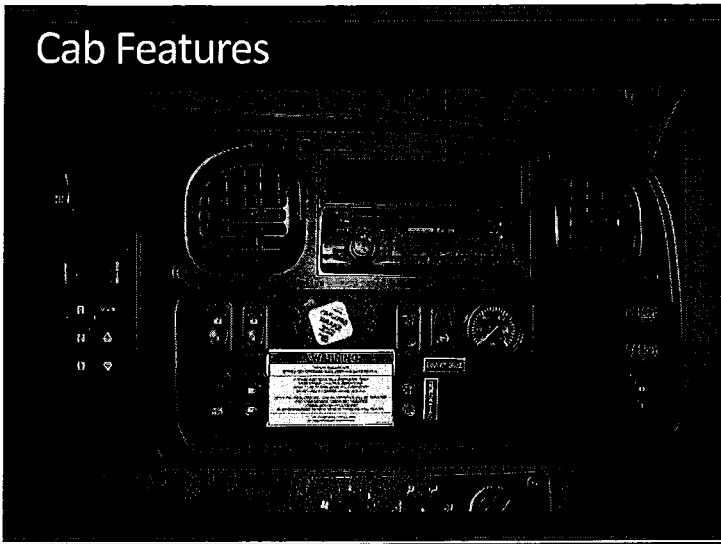 

## Cab Features

Driver's Window

Passenger's Window

Mirror Heat

**Door Locks**  
Use of this switch will lock/unlock the entire unit. If the doors are inadvertently locked, they can be unlocked with the stealth switch on the rear of unit

## Cab Features

Light Test

Exhaust Brake ON/OFF

Active Regeneration

Rear Suspension Pressure

 
## Cab Features

- The Light Test switch will test only the DOT lights on the unit
  - Press the switch
  - Wait for countdown
  - All DOT lights will begin to flash off and on until stopped by driver
- All Emergency Warning lights must still be tested as usual

## Cab Features

12 Volt  
Power  
Outlets

Passenger  
Window  
Switch

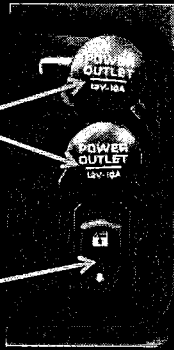


The 2016 EMS units have a second passenger window switch that is easily reached from the passenger seat.

## Cab Features

 Alpha Siren

Volt Meter

On-Spot  
Tire Chains

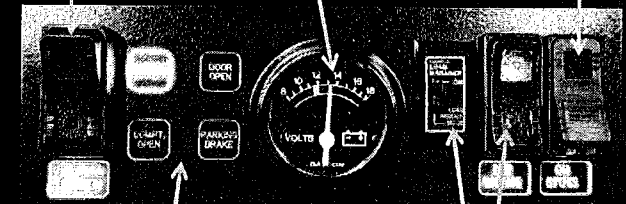


Indicator  
Lights


Load Manager & Low  
Voltage Indicators

## Cab Features

 - Emergency Warning Light panel located above windshield on Driver's Side

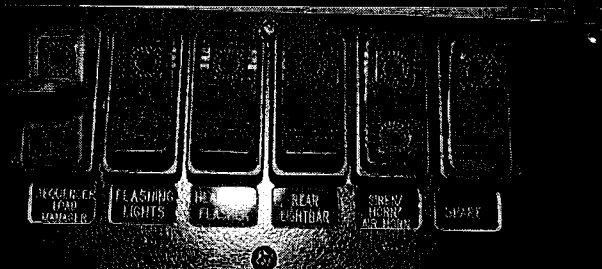


## Cab Features

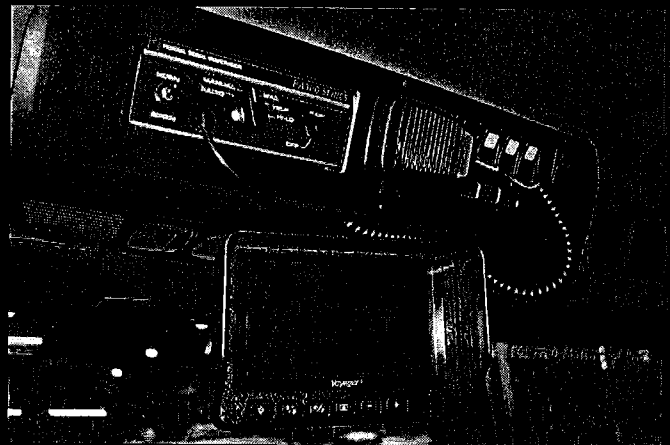 

## Cab Features

 - High Idle (Throttle), Scene Lighting, and HVAC Master all located above windshield near siren controls.

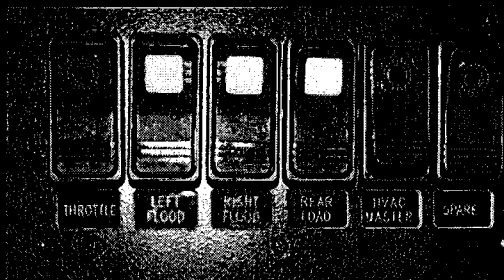

## Cab Features

 
- Steering Wheel Adjustment



Step on adjustment pedal for telescoping and tilt functions.  
Releasing the pedal will lock the steering wheel in place.


## Cab Features

- These units DO NOT have traction control
- They only have a Locking Rear Differential

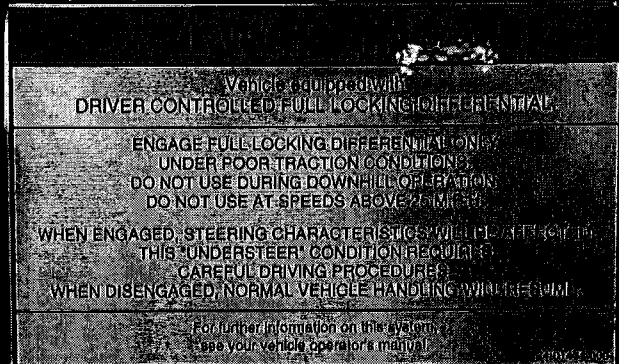

## Cab Features

 - Locking differential switch located above transmission selector keypad

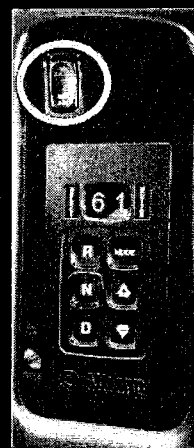



## Cab Features

- On-Spot Tire Chains
  - Located in front of rear axle



## Cab Features

  - Sigtronic Headsets
  - 2 headsets supplied in the cab
  - Push To Talk buttons located on front of console
  - 2 headsets supplied in the patient compartment

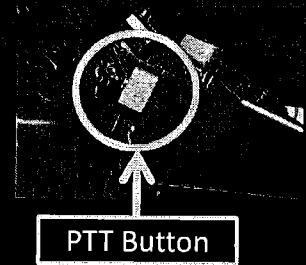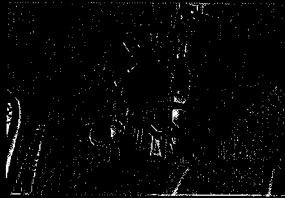

## Cab Features

- Windshield Wipers
  - The windshield wipers are designed to disable when the parking brake is applied
  - This is to prevent damage to the windshield and wipers while parked on scene
  - If the parking brake is applied the wipers will only swipe once until the brake is released

## Regeneration

- 1) All diesel exhaust systems must be fitted with a DPF and a regeneration system.
- 2) DPF is Diesel Particulate Filter which captures soot and ash from the engine exhaust.
- 3) Regeneration is the process of burning off the soot and ash.
- 4) There are two types of regeneration:
  1. Passive which requires no driver involvement.
  2. Active which requires driver involvement.
- 5) Warning lights in the dash cluster will advise the driver of what action is needed.

## Regeneration

### • Active Parked Regeneration

- 1) When the DPF lamp is solid a parked regeneration may be needed.
- 2) When the DPF lamp is flashing a parked regeneration is REQUIRED AS SOON AS POSSIBLE
- 3) During a regeneration exhaust temperature can reach 1300 degrees. Select an appropriate location.
- 4) Park unit, place the transmission in neutral, chock the wheel, and toggle the regeneration switch. Engine rpm should increase to approximately 1100rpm.
- 5) Keep exhaust 5 feet away from all objects and pedestrians.
- 6) The driver must remain with the vehicle during regeneration.

 
## Regeneration

### • Active Parked Regeneration

- 7) During the regeneration process the high exhaust temperature lamp will illuminate.
- 8) DO NOT complete regeneration in the Station or while connected to a Plymovent.
- 9) When the ECM determines the DPF has been regenerated engine rpm will decrease to normal rpm signaling the regeneration is over.
- 10) Remember exhaust components are still very hot.
- 11) If the regeneration process needs to be interrupted or stopped, depress the brake pedal.

## Regeneration


### • Active Parked Regeneration

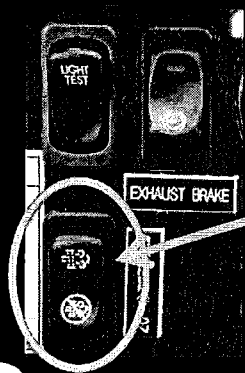

The regeneration switch is located in the center of the dash below the Light Test switch.

## Regeneration
 
### • DPF/DEF Warning Lights

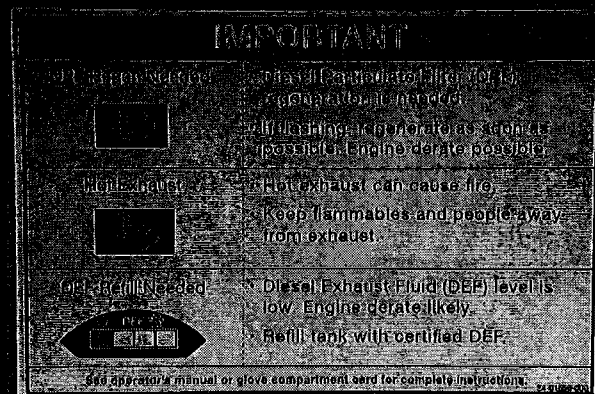

## Regeneration

### • Passive Regeneration

 
- Passive Regeneration will only occur during highway driving
- It is unlikely that EMS units will drive enough highway miles for Passive Regeneration to complete its cycle

## Diesel Exhaust Fluid


### • Diesel Exhaust Fluid (DEF)

- Urea based fluid
- Designed to lower Nitrous Oxides in exhaust
- Follow recommended storage procedures for fluid in station.


- The light bar indicates the level of fluid in the DEF tank.
- Low DEF levels will trigger a decrease in engine performance.
- The use of improper fluid will trigger a decrease in engine performance.
- In the empty and ignored state, vehicle speed will be limited to 5 mph until DEF is detected in the tank.

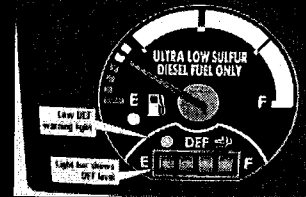

## Diesel Exhaust Fluid

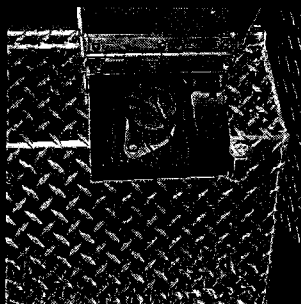 


 DEF Tank located rear of the batteries on the driver's side of the unit.

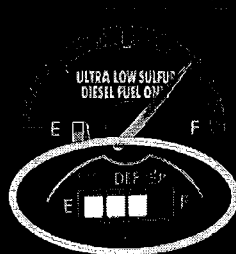

DEF Tank gauge located below fuel gauge on dash.

## Diesel Exhaust Fluid

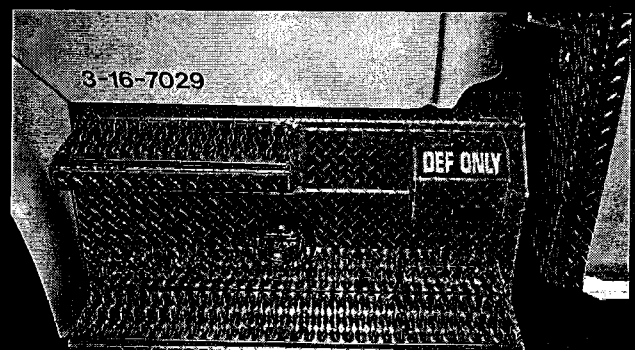 



## Diesel Exhaust Fluid

### • Refill Procedures

- CMF stocks DEF in industry standard 2.5 Gallon Containers
- 2 containers per case
- Each case comes with 2 filler tubes
- DEF is requested when ordering Station Supplies or as needed through FMRS.
- Any DEF container or filler tube that shows any signs of crystallization MUST be immediately discarded to avoid vehicle damage
- Any DEF spills or splashes should be diluted with water

## Diesel Exhaust Fluid

### • Refill Procedures

- Only add DEF to the appropriate DEF tank
- DO NOT add DEF to the fuel tank
- DO NOT add fluid until the DEF level is at HALF (1/2)
- When DEF level reaches HALF, only add a single 2.5 gallon jug to the DEF tank using the supplied filler tube
- DO NOT top off DEF
- The empty jug AND filler tube MUST be thrown away. **DO NOT RE-USE!!!**

## Diesel Fuel Tank

 
- The fuel tank has been moved from the officers side step to under the rear of the unit.
- Fuel Fill is located on the driver's side, rear of the drive axle.
- Tank Capacity is 40 Gallons



Fuel Fill

## Shoreline Connection


- The shoreline connection has changed from previous EMS units
- BOTH indicator lights should be illuminated when the unit is plugged in.

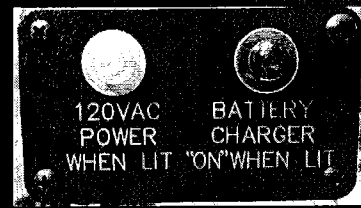

## Shoreline Connection

- If BOTH lights are not illuminated the interior breaker must be reset.
- Breaker is in the compartment behind the Captain's Chair.

 Circuit Breaker

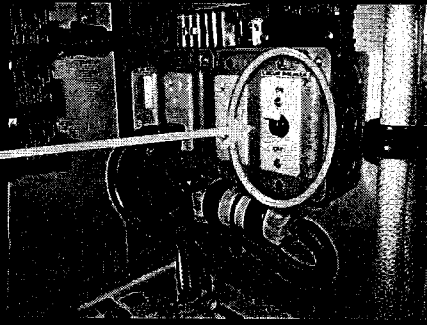


## Timer Bypass Switch

- As labeled, the battery switch in this compartment is for SHOP USE ONLY. DO NOT TURN ON!!!




 
## Patient Compartment Features

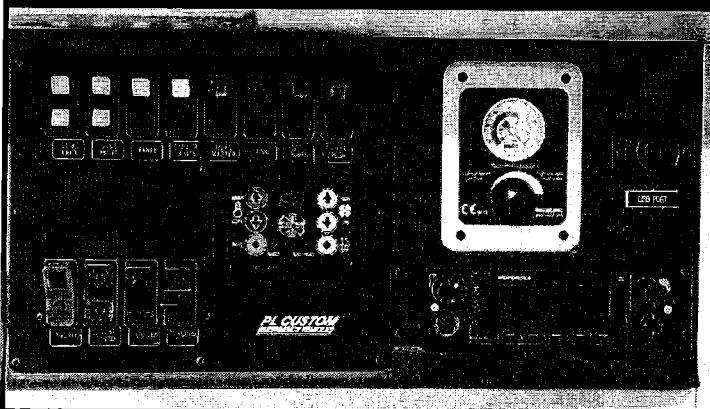

## Patient Compartment Features

  
- USB Ports
  - Please use provided USB ports for charging mobile devices
  - DO NOT charge personal devices through MDC or EMEDS computers.

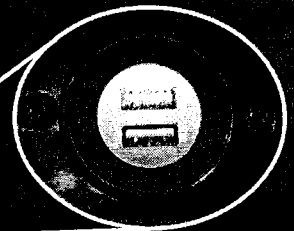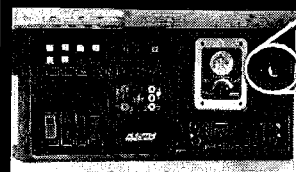


## HVAC Controls

### • HVAC Master Switch

 
- One located in switch cluster above passenger seat
- One located on panel in patient compartment
- Either one must be on for rear HVAC to function

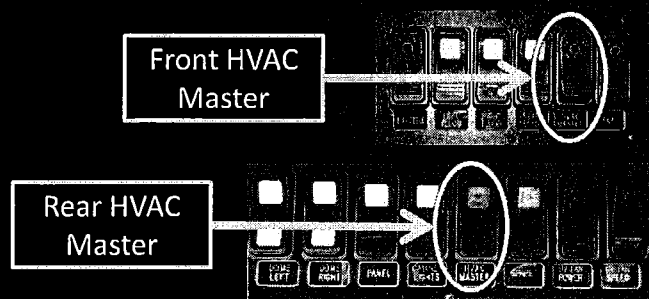

## HVAC Controls

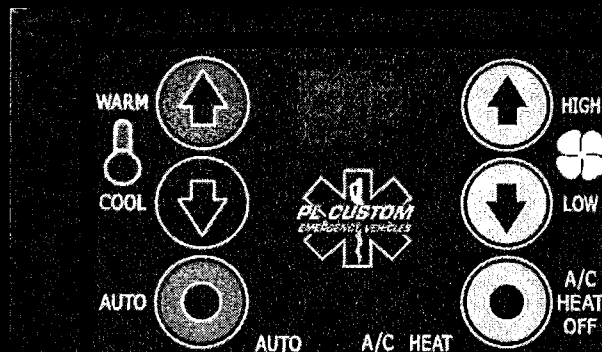 


## HVAC Controls

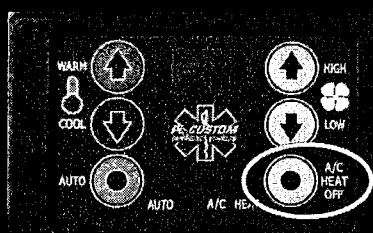 

### • Mode Selector

- Press once for AIR CONDITIONING
- Press again for HEAT
- Press once more to turn OFF
 
## HVAC Controls

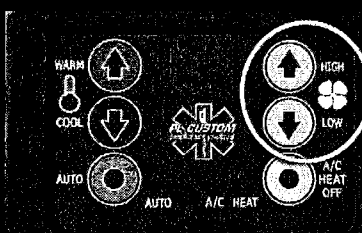


### • Blower Motor

- 3 settings
- F1 – Low
- F2 – Medium
- F3 – High


## HVAC Controls

### • Temperature Setting

 - Range between 50° F and 99° F
- Set by pressing appropriate arrow to desired temperature
- Will show set temperature for 2 to 3 seconds then toggle back to ambient temperature

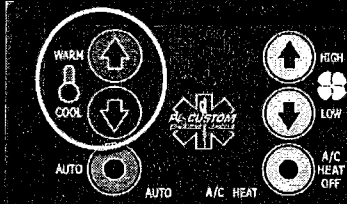


## Oxygen Monitoring System

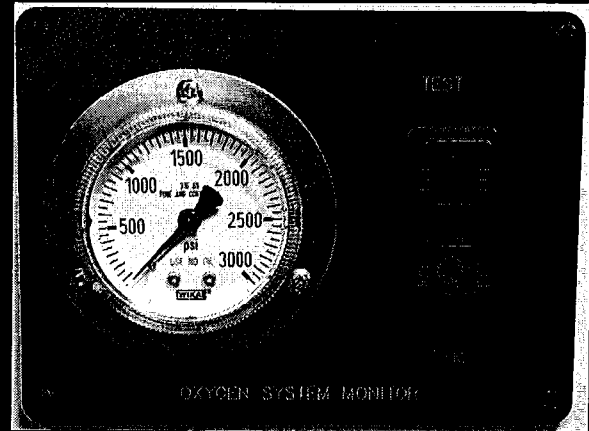 

## Oxygen Monitoring System

### • Analog Gauge

 - Monitors Pressure even when vehicle power is OFF
- Audible and Visual Alarm set to 250psi

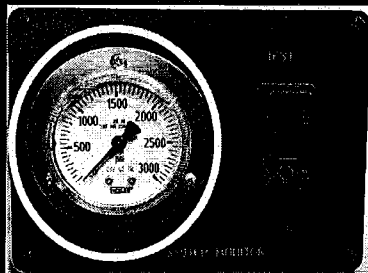

## Oxygen Monitoring System

### • Lights

- Green Light indicates Oxygen Level is OK
- Red Light indicates Oxygen level is low – Below 250psi



### • Switches

- Green switch tests lights
- Red switch silences alarm

## Captain's Chair

 
 
- The Captain's Chair can be used in the fully rearward facing or fully forward facing positions.

SEAT MUST BE IN FORWARD POSITION BEFORE SWIVELING OR DAMAGE CAN BE CAUSED TO THE SEAT AND CABINET




## Captain's Chair

- The handle to release the seat can be found on the right side of the seat.

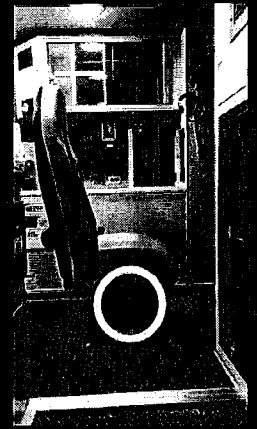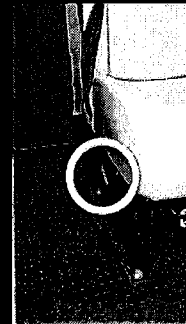


## Rear Turn Signals

 - A set of turn signal indicators has been added to the ceiling of the patient compartment just inside the rear doors.
- This will give the provider advance warning for upcoming turns.

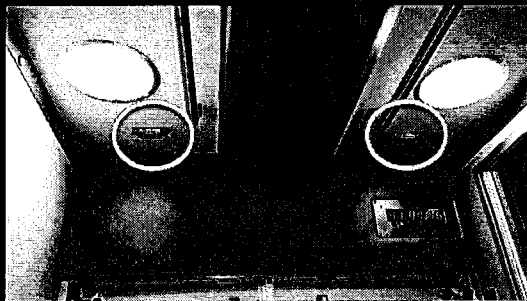


## Rear Air Dump

 - The rear suspension is still utilizing airbags.
- The suspension will dump when the rear doors are open.
- The override switch is inside the LEFT door.

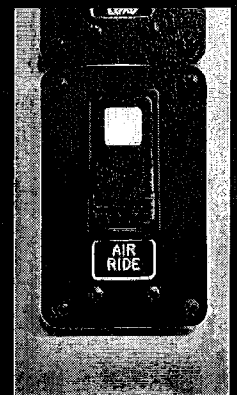

## Side Door Automatic Step

 - The side step is now controlled by a switch
- Switch is located inside the side door
- If this switch is in the off position the step WILL NOT extend when the door is opened.

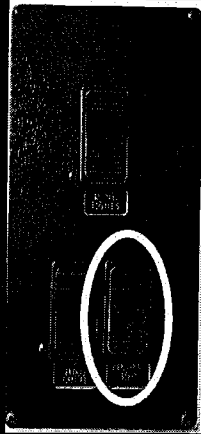

## Zico Oxygen Lift

 
- Similar to existing units



Remember to  
UNLOCK




Control mounted  
in compartment

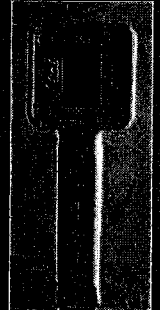


Control

## Zico Oxygen Lift

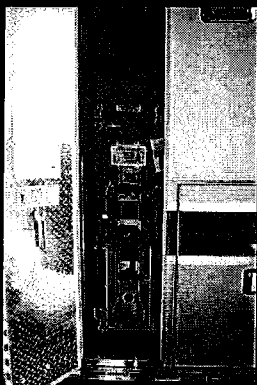 


Stored

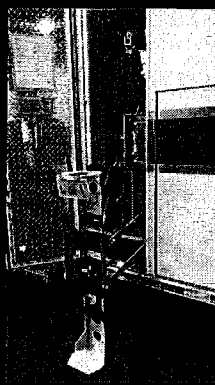 

Deployed

## Lifepak Clamp

 - The units will be equipped with a mount for the Lifepak

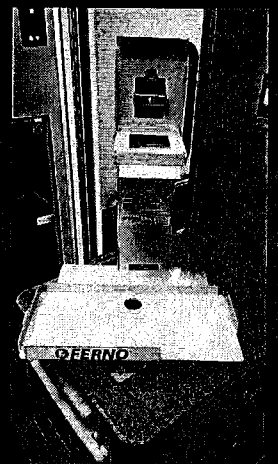

## Lifepak Clamp

 


## Lifepak Clamp



## Toughbook Clamp

- The EMEDS Toughbook clamp works similarly to all existing clamps.
- All electrical connections have been removed from the mount.
- The Toughbook must be plugged in with the pigtail

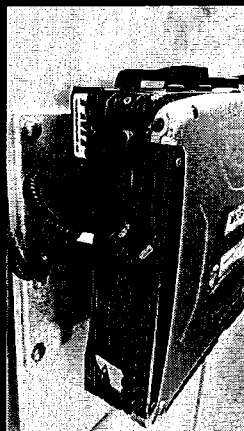

## Backboard Grips

- Place the bottom of the backboard in the channel first
- Push the top of the backboard firmly in the channel
- Remember to fasten seat belt



## Backboard Grips

Place Bottom



Push in channel

 


Secure Belt



## Rear Stealth Button

- Similar to existing units
- Switch will Unlock AND Lock all cab, compartment, and patient compartment doors.
  - Press DOWN to unlock
  - Press UP to lock

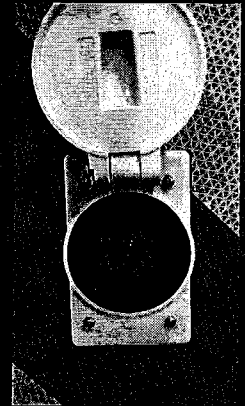


## LED Scene Lighting

- Scene lights on both sides of the unit are 12 volt LED style.



## LED Scene Lighting

 - Rear scene lights are standard bulbs in the rear light bar.
- Also illuminates the LED reverse lights.

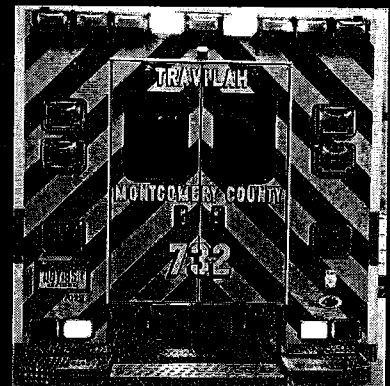



## LED Compartment Lighting

- All interior compartments have LED lighting that is controlled by a switch on the panel labeled "Cabinet Lights"



## Car Seat Installation Review

- All of the convertible car seats that are carried in the outside compartment were provided by the car seat program and meet all of the federal requirements

**SAFE  
K:DS**  
MONTGOMERY  
COUNTY



 
## Car Seat Installation Review

- The primary place that the seats should be secured is **rear facing on the cot**.




## Car Seat Installation Review

- When the seat is secured **rear facing**, a cot strap should go through each belt path on the seat.

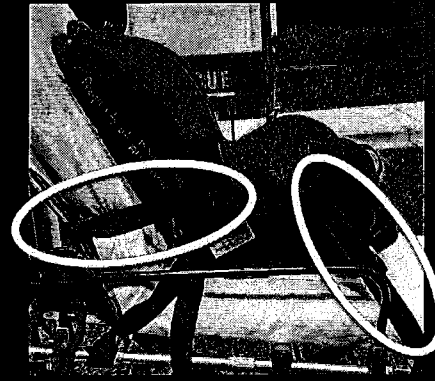


## Car Seat Installation Review

 - The lower strap **MUST** be moved past the folding handle.

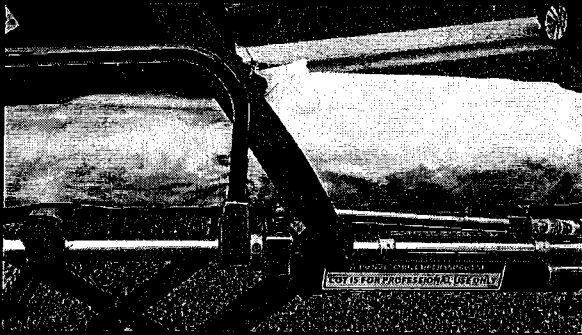

## Car Seat Installation Review

 - The buckles should be moved so they are not positioned underneath the child.

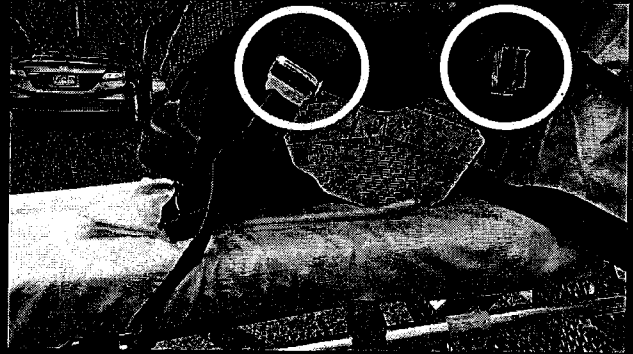


## Car Seat Installation Review

- The buckles may also have to be shortened for proper placement.
- This can be done by twisting the buckle portion **NO MORE THAN** 3 complete twists



## Car Seat Installation Review

 - The straps on the car seat should be properly adjusted based on the size of the child.
- Refer to owners manual or certified car seat technician for help with this.

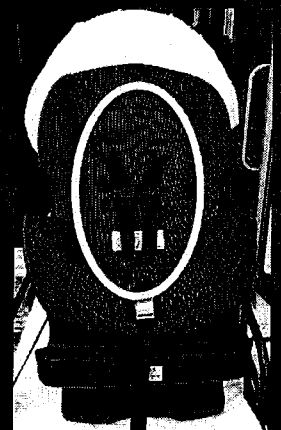

## Car Seat Installation Review

- Infant carriers must NEVER be used on the cot as they cannot be properly secured.



## Car Seat Installation Review

- The car seat that is incorporated into the Captains chair can only be used for a child that is:
  - \* Between 20 pounds and 50 pounds
  - \* Between 28 and 47 inches in height
  - \* Over 1 year old
  - \* Can sit up on their own.



## Car Seat Installation Review

### Instructions for using the Child Restraint

The EVS Child Seats are approved for use in a REAR- or FORWARD-FACING position only.

BEFORE USE, READ OWNERS'S MANUAL LOCATED BEHIND THE REMOVABLE CHILD SEAT PAD.

With nearly all EMT seats installed in a REAR-FACING position, these instructions will be limited to this primary use.

 
This built-in child restraint system conforms to all applicable Federal motor vehicle safety standards (European = E.C.E. Regulations - 44.3 for child restraint systems).

This built-in child restraint is designed for use by children who weigh between 20 and 50 pounds (9 kg - 25 kg) and are between 28 and 47 inches in height (Europe = children in Group 1 and 2) and can sit upright and alone.

IMPORTANT! THIS IS NOT AN INFANT CARRIER. CHILDREN WHO ARE NOT AT LEAST 1 YEAR OLD OR THOSE THAT DO NOT MEET THE WEIGHT AND HEIGHT SPECIFICATIONS STATED ABOVE REQUIRE A FEDERALLY APPROVED (OR E.C.U. R-44.3 APPROVED) INFANT CARRIER.

## Car Seat Installation Review

- Place the top buckle at armpit level first

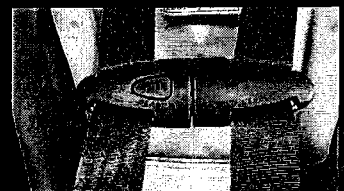

- After the lower buckles are buckled, all adjustments are made on the lower straps.

## Car Seat Installation Review

- If it is absolutely necessary, the seat can be placed forward facing at the end of the bench seat against the wall, provided that it can be secured with less than one inch of movement left or right at the belt path **AND** the child is at least a year old and over 22 lbs.



## Car Seat Installation Review

- This will take 2 people to install
- The seat belt must be fully extended and passed through the car seat forward facing belt path (back of seat)
- While one provider is placing weight in the seat the other will attach the belt



## Car Seat Installation Review

- After the belt is attached and the belt has retracted it must be tightened
- Unlatch the belt and allow it to retract a few clicks while holding it.
- Place weight in the seat and buckle it again
- Repeat until **TIGHT**



## Car Seat Installation Review

- As an absolute last resort, the seat can be placed in the front seat of the unit, forward facing only with the seat as far back as possible from the airbag.
- Only use for an child who is not a patient
- This method requires a special locking clip
- **THIS MAY ONLY BE DONE BY A CERTIFIED CAR SEAT TECHNICIAN.**

## Comments, Questions, Suggestions

- Please contact the Driver's Training Office with any training related questions
- Please contact Emilie Crown with any Car Seat related questions at 240-777-2467.





## NIGHT DRIVING

### Common Problems

- Difficulty with visual perception
- Eyes adapting to changing levels of brightness
- Visual "Cues" at darkness are eliminated
- Darkness causes lower levels of keenness
- Smaller fields of vision
- Shortened seeing distance



Montgomery County Fire and Rescue

Class 'B' Driver Course Session 9-1  
Version 08-1



## NIGHT DRIVING

### Common Problems

- Driver fatigue increased at darkness
- Most drivers overdrive their lights
- Glare
  - ✓ Adjust your speed to compensate for glare



Montgomery County Fire and Rescue

Class 'B' Driver Course Session 9-1  
Version 08-1



## NIGHT DRIVING

### Glare

The human eye takes about 7 seconds to fully recover from being blinded by bright light. At 60 MPH, a car will travel 616 ft. in 7 seconds.



Montgomery County Fire and Rescue

Class 'B' Driver Course Session 9-1  
Version 08-1



## NIGHT DRIVING

### Collision Avoidance at Night

- ✓ Make sure your eyes are well rested
- ✓ Know the range of your headlights
- ✓ Reduce speed when confronted with glare
- ✓ Dim your headlights for oncoming cars
- ✓ Keep your windshield, headlights and emergency lights clean
- ✓ Know your limitations driving at night



Montgomery County Fire and Rescue

Class 'B' Driver Course Session 9-1  
Version 08-1

## CONTROLLED BRAKING

- Measures the Emergency Vehicle Operator's ability to steer and brake the vehicle at a pre-determined speed (20-25 mph) when an unexpected obstacle moves in the path of the Emergency Vehicle.
- Hands should be at the 9 and 3 o'clock positions on the steering wheel.

Montgomery County Fire and Rescue

 
Class "B" Driver Course Session 9-1  
Version 08-1

## LEFT/ RIGHT LATERAL EVASIVE MANEUVERING

- Measures the Emergency Vehicle Operator's ability to steer the vehicle at a pre-determined speed (20-25 mph) when an unexpected obstacle moves in the path of the Emergency Vehicle.
- Provides practice in taking sudden evasive actions to avoid a collision, and the reaction of the Emergency Vehicle to sudden change.

Montgomery County Fire and Rescue

Class "B" Driver Course Session 9-1  
Version 08-1

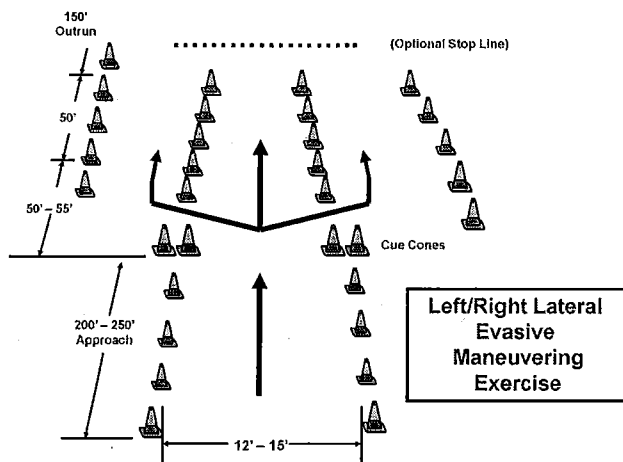



## Review

- Training
- How skids occur
- Overcoming driving errors
- Types of vehicles
- Types of Brake Systems
- Types of skids
- Night Driving

Montgomery County Fire and Rescue

  Class "B" Driver Course Session 9-1  
Version 08-1



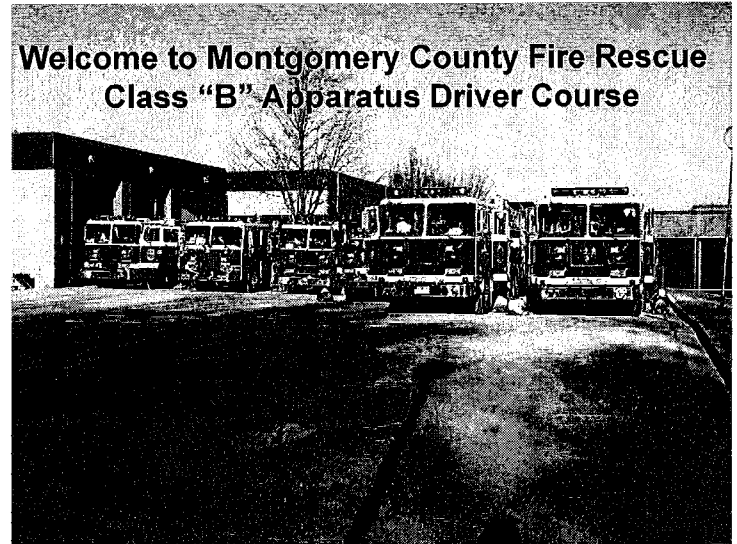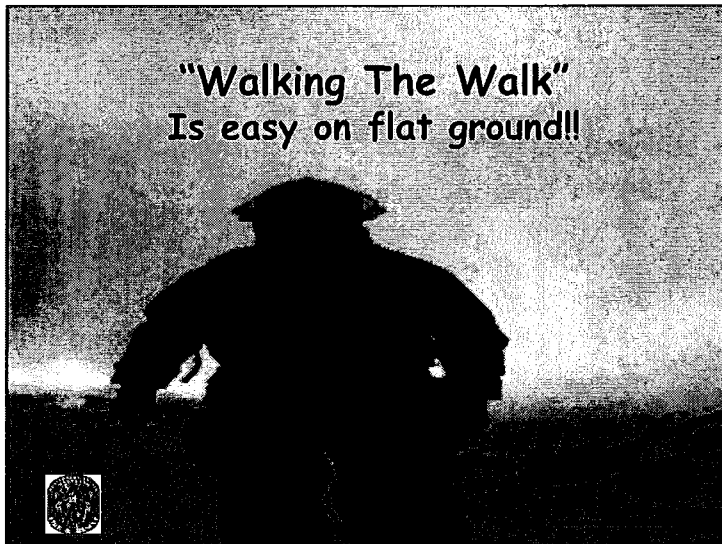

## Instructor Contact Info Page

### Contact Information

301-279-1148 Office

240-499-6087 Cell

Report Time is:

All sessions are mandatory



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Course Requirements

### Written Exam 70% Passing

- Safe Driving Principles
- Maryland Motor Vehicle Law
- Air Brake Systems

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Course Requirements

### Practical Exams 70% Passing

- Pre-Trip Inspection
- MCFRS Brake Test
- Skills Course (10 minute maximum time)
- Commentary Driving (Acceptable Evaluation)
- Parallel Parking (5 minute maximum time)
- Remedial Training if you passed the written exam

Montgomery County Fire and Rescue

 
Class "B" Driver Course Session 1-1  
Version 08-1

## Overview

- Why Class "B" Driver Course
- Driver & Officer Responsibility
- Review Motor Vehicle Statutes
- Legal Definitions
- Safe Vehicle Operation Policy
- Safe Driving Principles

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

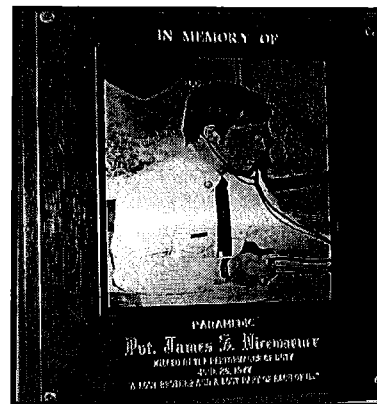

Montgomery County Fire and Rescue



Class "B" Driver Course Session 1-1  
Version 08-1



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



**Fatal Collision March 29, 2005**

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

- **Last Montgomery County On Duty Death?**
- **1977 P/M James Nicewarner**
- **How many civilian deaths since 1977?**
- **7 civilian deaths involving Montgomery County Fire and Rescue Emergency Vehicles**

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

In the year 2003, more firefighters were  
**KILLED in VEHICLE COLLISIONS**  
than in structural firefighting.

There were 33  
**LINE OF DUTY DEATHS**  
involving collisions  
**29 LINE OF DUTY DEATHS**  
fighting fires  
**24 LODD from Collisions in 2004**  
**28 LODD from fighting fires**

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## NIOSH REPORT

- Between 2003-2009 1308 civilian workers died in crashes each year according to NIOSH.
- Work related roadway crashes kill more employee's each year than any other occupational cause of death.
- 347 pedestrian workers died each year as a result of being struck by a motor vehicle.

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Law Enforcement Deaths 2004

### □ 154 Police Officer Deaths

### □ 72 from Traffic Related Collisions

"USA Today December 29, 2004"

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## METRO

### Emergency Vehicle Crashes Worry Montgomery Officials

#### Firetruck, Ambulance Accidents Raise Insurance Rates

By Tim Crane  
Washington Post Staff Writer

Drivers of Montgomery County firetrucks and ambulances continue to be involved in what officials regard as an alarming number of accidents, causing insurance rates to skyrocket and forcing new policies designed to slow response times to some calls.

In a short department-wide e-mail last month, prompted by four accidents within a 24-hour period over the fourth of July weekend, Thomas W. Carr Jr., chief of the county's career firefighters, said

the drivers' performance was placing the public and fire and rescue personnel at risk.

"I am sitting in my office on July 4, thinking that I am not in the throes of planning a firefighter funeral or sending a civilian family with their grief," he wrote. "We must break the chain and we have to do it immediately and that may take radical action. I am prepared to take action."

He added, "I am afraid we continue on the path to catastrophe."

No details about the recent accidents were available yesterday, but Carr's e-mail indicated that there

were no injuries.

In May 2004, The Washington Post reported that Montgomery firetrucks and ambulances had been involved in 1,100 accidents in the previous five years, doing so much damage to the fleet that the department risked losing its insurance coverage.

Departmental reviews of the most serious accidents, including crashes that left one motorist dead and more than a dozen injured, found that many could have been avoided had drivers slowed before

See FIRETRUCKS, B1, Oct. 5

obey the signals.

The following are excerpts from an article written by Matthew Meek of the Washington Post, headlined "Montgomery Fire, Rescue Crashes Rise": "Drivers of Montgomery County firetrucks and ambulances have had more than 1,100 accidents in the last five years, doing so much damage to the fleet that the Fire and Rescue Service is at risk of losing its insurance coverage, according to county records. Montgomery has received warnings from its insurance underwriter that the mounting losses, totaling nearly \$2 million since 1997, "exceed trends from comparably sized fire service clients on both the east coast and the west coast," according to a memo written by the county's fire administrator. Departmental reviews of the most serious accidents, including crashes that left one motorist dead and more than a dozen injured, have found that many could have been avoided had drivers slowed before entering intersections or followed proper procedures as they responded to emergency calls. There

FIREHOUSE  
MAGAZINE  
NOVEMBER 2003

OUR  
DEPARTMENT  
HAS A  
COLLISION  
PROBLEM

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

# COLLISION PROBLEM

 
- Everyone must take ownership and be held accountable for our collision problem
- Indifference: "It's always someone else that can't drive safely."
- We need to change the DRIVING culture of the Fire Service



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


**Our Goal Is to Put MCFRS Drivers In the Best Position Possible to Avoid a Collision and Become a Safer Driver**

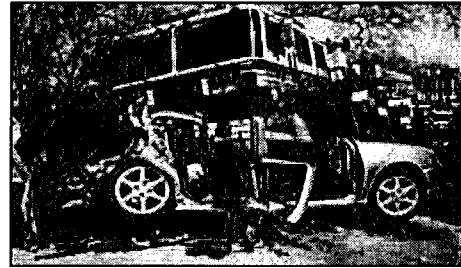

Montgomery County Fire and Rescue

 Class "B" Driver Course Session 1-1  
Version 08-1




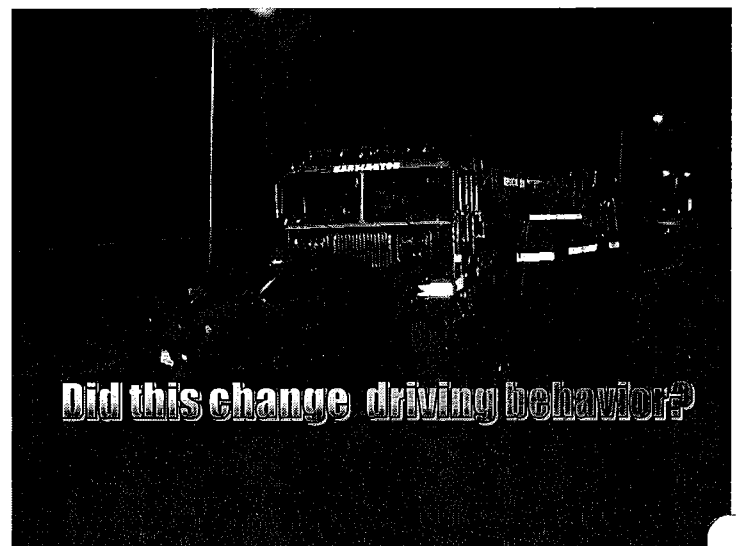


**21 Staff Vehicles Involved In  
Collisions 2004**

**EMS 1 Collision September 28, 2004**

  **WHAT WILL IT TAKE TO  
CHANGE  
YOUR DRIVING BEHAVIORS?**

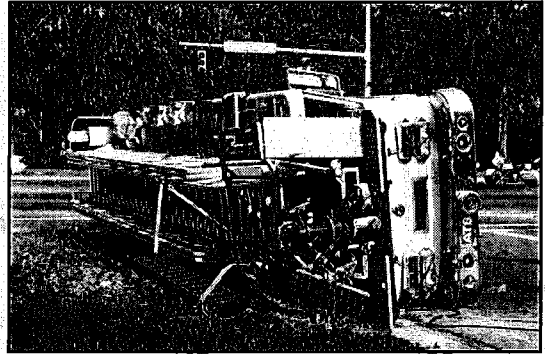

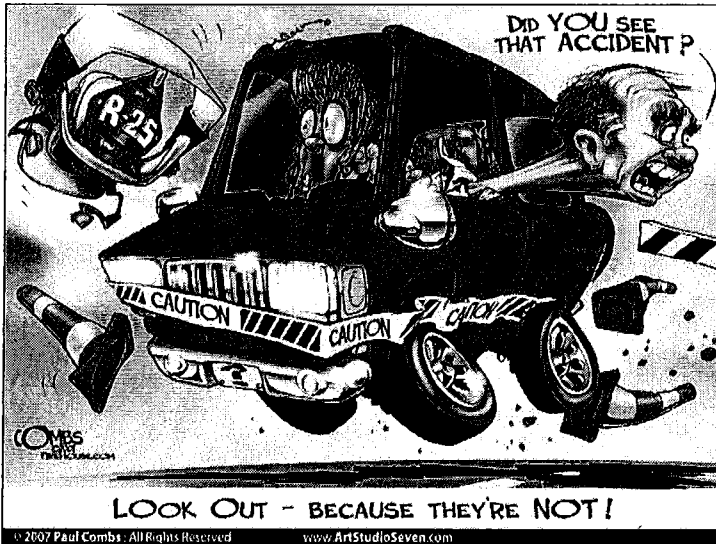

Safe driving is not a new concept  
for our department.

However, it will involve a complete  
paradigm shift in all of our driver  
behaviors and how we currently  
certify personnel to drive  
emergency vehicles.



VINCENT  
BRANNIGAN

"YOU HAVE NO RIGHT  
TO RISK PEOPLE'S  
LIVES ON THE  
HIGHWAY  
TO SAVE  
PEOPLE WHO MAY BE  
TRAPPED IN A FIRE"

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## BEHAVIOR BASED SAFETY

- Our focus has been on speed since the first day of your training.
- Arriving FAST vs. arriving SAFELY
- If you don't arrive, how can you help!

Montgomery County Fire and Rescue

 
Class "B" Driver Course Session 1-1  
Version 08-1



## BEHAVIOR BASED SAFETY

- Each shift look in the mirror.

**"I am going to do my best to drive safely and avoid a collision today."**

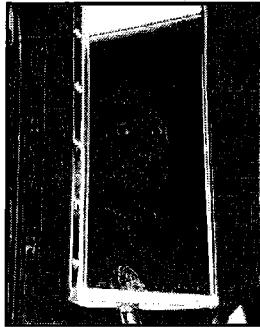

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## CHANGING BEHAVIOR

 
- ✓ Education
- ✓ Engineering
- ✓ Enforcement
- ✓ Positive Peer Pressure

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Collisions/Incidents


2005 DFRS Data

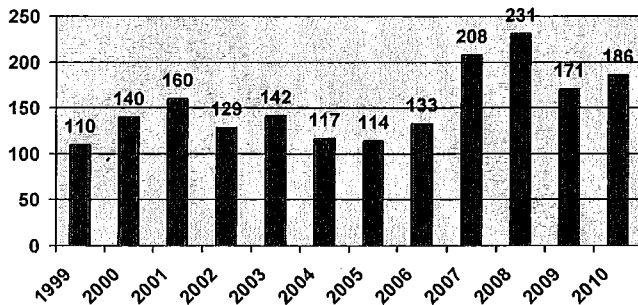

Montgomery County Fire and Rescue  
DC Introduction

Class "B" Driver Course Session 1-1  
Version 08-1


## BACKING INCIDENTS

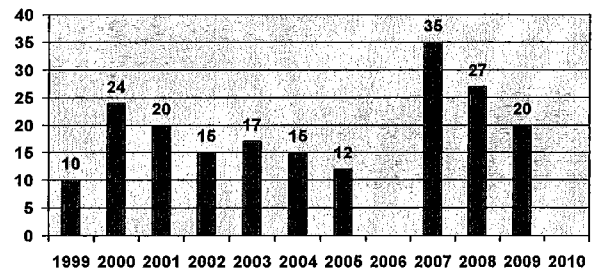 

Montgomery County Fire and Rescue  
Introduction


Class "B" Driver Course Session 1-1  
Version 08-1

## EMS/OTHER UNITS VS. HEAVY APPARATUS

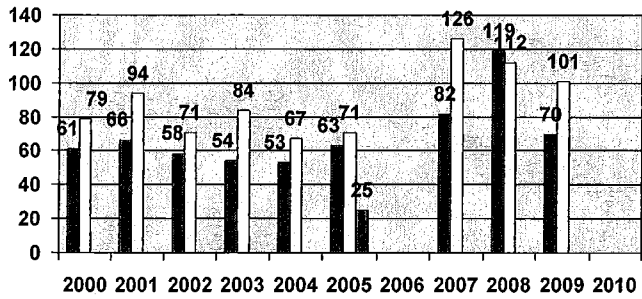 

■ EMS/Other □ Heavy Apparatus ■ Primary Driver  
 Montgomery County Fire and Rescue  
 Class "B" Driver Course Session 1-1  
 Version 08-1


## COLLISIONS INVOLVING SINGLE VEHICLE

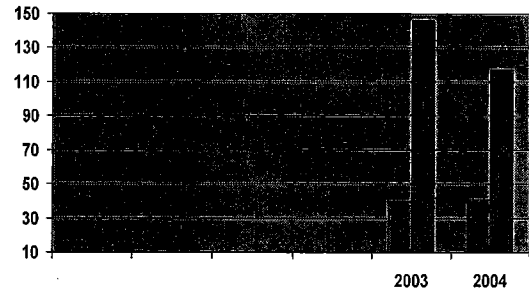 

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
 Version 08-1

## Type of Vehicle Involved in Fatal Collision (1990-2000)

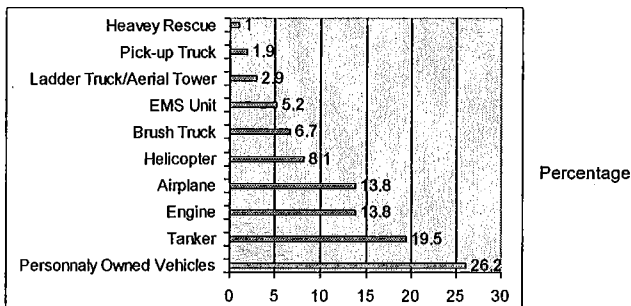 


U.S. Fire Administration

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
 Version 08-1

## Unit Responses vs. Collision History

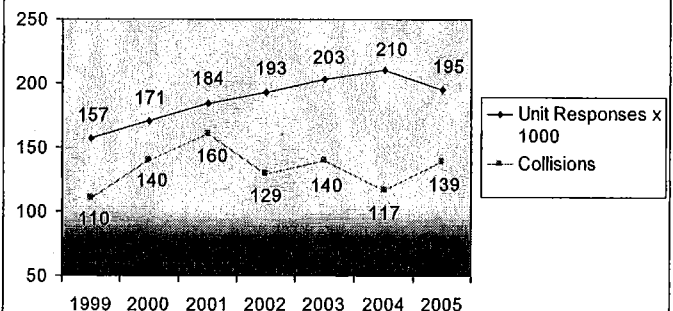 

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
 Version 08-1


## SEATS BELTS

 - We Require You To Use Them
- Your Spouse Expects You To Use Them
- Your Children and Family Need You To Use them



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

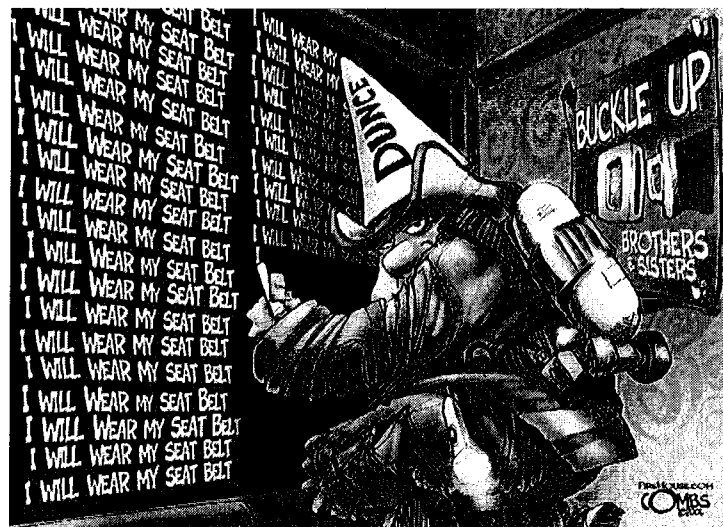

© 2006 www.ArtStudioSeven.com

combscartoons@yahoo.com

## Why Class "B" Apparatus Driver Course ?

### Maryland MVA Law Change

- 16-102. Persons exempt from licensing requirements
- (12) A member or employee of a fire department, rescue squad, emergency medical service unit, or volunteer fire company while driving an emergency vehicle if the driver:



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Why Class "B" Apparatus Driver Course ?

- (i) Holds a valid Class C license issued to the driver under section 16-104.1 of this subtitle;
- (ii) Has been authorized by then political subdivision that operates a fire department rescue squad, emergency medical services unit, or volunteer fire department to operate the type of emergency vehicle being driven; and



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Why Class "B" Apparatus Driver Course ?

- (iii) Is driving the emergency vehicle in the performance of the official duties of the driver in or out of state.

## Why Class "B" Apparatus Driver Course ?

### Regulation

- (1) The Administration shall adopt regulations that establish mandatory training and testing requirements that a political subdivision that operates a fire department, rescue squad, emergency medical services unit, or volunteer fire department must implement before the political subdivision may authorize an individual to operate an emergency vehicle in accordance with subsection (a) (12) of this section.

## Why Class "B" Apparatus Driver Course ?

### Implement Standardized Driver Training

 
#### ➤Past Practices

 
- Class "B" & "A" training at the station level
- Inconsistent information
- Focus was not on "Safe Driving"
- Some personnel were "left out"

## Why Class "B" Apparatus Driver Course ?

### Collision Reduction

MCFRS goal is to reduce frequency and severity of collisions involving MCFRS apparatus

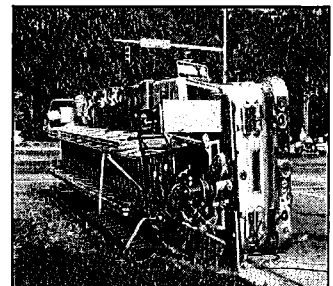

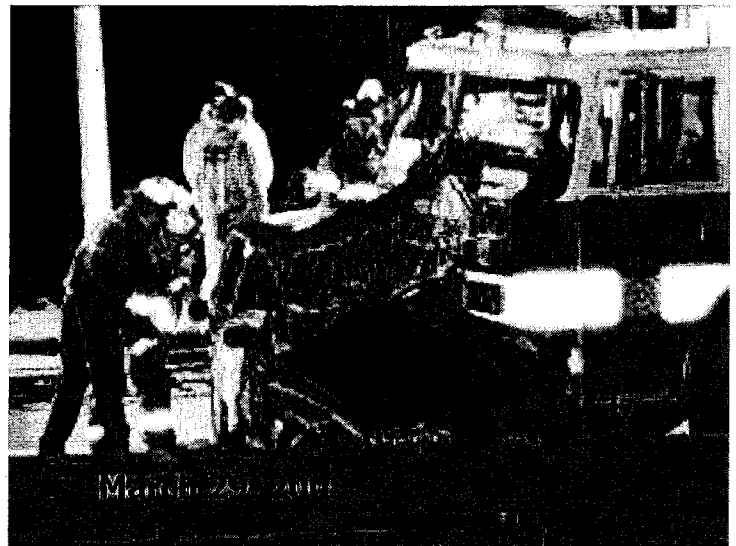

## Class "B" Apparatus Driver Course



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## NEW PHILOSOPHY

*We drive our vehicles with the mindset that the other driver will make a mistake in the path of our vehicle.*

*Our operators will drive proactively by adjusting their driving to avoid collisions triggered by other drivers, traffic, and environmental conditions.*



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- All drivers of emergency vehicles shall be directly responsible for the safe and prudent operation of the vehicle under all conditions.
- Driver's first priority shall be for the safe arrival of the emergency vehicle at the emergency scene.




Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- Drivers shall not move emergency vehicles until all the personnel on the vehicle are seated and secured with seat belts and in approved riding positions.



Montgomery County Fire and Rescue


Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

During emergency response, drivers of emergency vehicles shall be able to stop the vehicle to avoid a collision for any of the following:

- Red traffic lights
- Stop signs
- Negative right-of-way intersection
- Blind intersections
- When encountering a stopped school bus with flashing warning lights (complete stop)
- When the driver cannot account for all lanes of traffic in an intersection
- When other intersection hazards are present



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- During non-emergency travel, drivers of emergency vehicles shall obey all traffic control signals and signs and all laws and rules set forth by state or local jurisdiction.
- During emergency response or non-emergency travel, drivers of emergency vehicle shall come to a complete stop at all railroad grade crossings. DFRS Policy #808



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- The driver shall be aware of his/her rate of closure on other vehicles and pedestrians.
- Driver & Officer shall ensure that all personnel on the vehicle are seated and secured with seat belts and in approved riding positions prior to movement of the emergency vehicle.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- Officer shall direct the driver to cease any unsafe driving, such as excess speed or unsafe intersection practices.
- Officer shall be responsible to operate the radio and communications equipment during response.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- Driver & Officer shall ensure driver is operating the vehicle in a safe and prudent manner during response in accordance with departmental policy and state statutes.
- Officer shall issue warnings about road and physical hazards to the driver.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- Officer shall operate the audio and visual warning devices.
- Officer shall check map book, run cards or computers aided response to assist the driver in determining the safest and most direct route to the emergency scene.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Driver and Officer Responsibility

- Officer shall assist the driver in intersection crossing and backing according to specific responsibilities outlined in the intersection and backing policies.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### Review

- TR 11-118 Emergency Vehicle
  - Vehicles of Federal, State or Local Law enforcement agencies;
  - Vehicles of fire departments, rescue squads, volunteer fire departments,
  - EMS systems and MD Fire & Rescue Institute
  - State vehicles responding to Haz-Mat spills
  - State vehicles designated by Commissioner of Corrections
  - Ambulances
  - Special vehicles funded or provided by governments and used for
  - emergency or rescue purposes in this State.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

- TR 11- 162 Definition of STOP
  - Stop means complete cessation of movement.
- TR 19 – 103 Liability for Negligent Operation of Emergency Vehicle
  - An authorized Emergency Vehicle Operator who is using the vehicle in an actual emergency (i.e. responding to an emergency call, etc...) has immunity from Liability.
  - The owner or lease of an Emergency Vehicle is liable to an extent provided by 5-639 for any damages caused by a negligent act by the operator while using the vehicle in an actual emergency.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1






## Maryland Vehicle Statutes

### TR 21 – 106 Emergency Vehicle Privileges

- **The driver of an emergency vehicle may:**
  - Park or stand without regard to the law
  - Go through a red light, stop sign or yield after slowing for safety
  - Reasonably exceed the max. speed limit
  - Disregard any traffic control signal regarding turning or movement
    - (no left turn, not u-turn)



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 405 Operation of Vehicles on Approach of Emergency Vehicles

- Upon approach of an emergency vehicle using audible and visual signals, or a police vehicle using a audible signal, the driver of every other vehicle shall yield right of way.
- Upon approach of an emergency vehicle, every other vehicle shall drive immediately to a position parallel to and as close as possible to the edge or curb of the roadway clear of any intersection.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

- **Stopping until emergency vehicle passed:**  
Driver of every other vehicle shall stop and stay in that position until passed.
- **Passing of emergency vehicle:** only allowed when directed by a police officer or when the vehicle has stopped.
- Driver must drive with due regard for safety of all persons.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 510 Pedestrians to Yield Right – of – Way to Emergency Vehicle

- A pedestrian who crosses a roadway shall yield right of way to any approaching emergency vehicle that is using audible and visual signals.
- This includes police vehicles using only a siren
- The driver of any emergency vehicle must still drive with due regard for the safety of all people.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 706 Overtaking and Passing School Vehicle

- Driver to stop on meeting or overtaking stopped school vehicle: If a school vehicle has stopped on a roadway and operating stop lights, the driver of any vehicle meeting or overtaking the school vehicle shall stop at least 20 feet away in the front or rear of vehicle
- The driver of vehicle meeting or overtaking a school vehicle may not proceed until school vehicle resumes motion or deactivates red stop lights.
- Exception: does not apply to driver, if school vehicle is on different roadway.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 1003 Stopping, Standing or Parking Prohibited

#### Prohibited in:

Front of public driveway  
On a sidewalk  
In an intersection  
On a crosswalk  
In a highway tunnel  
On any bridge



Montgomery County Fire and Rescue


Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 1003 Stopping, Standing or Parking Prohibited

- Within 15ft. of a fire hydrant
- Within 30ft on approach to flashing signals, traffic control signal, side of roadway, stop sign, or yield sign.
- Within 20ft of driveway entrance to fire station
- Within 50ft of railroad crossing



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 21 – 1110 Crossing Fire Hose

- Driver of vehicle may not drive over any unprotected fire hose of a fire department that is laid down on any highway or private driveway without consent of fire department official in command.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 22 -218 Audible and Visual Signals

- Every emergency vehicle must have a siren, exhaust whistle, or bell
- Emergency vehicles shall have signal lamps mounted as high as practicable. Must be visible at 500 ft. in normal sunlight.
- No person shall drive on any highway a vehicle equipped with oscillating, rotating, blinking, or other type of emission of light



Montgomery County Fire and Rescue


Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

### TR 22 – 412.4 Seat Belts or Restraining Devices

- Vehicle registered & manufactured after 1990 shall be equipped with a seatbelt or safety restraining device for each position that may be lawfully occupied by a passenger.
- However, failure to use seatbelt or safety restraining device may not be considered evidence of negligence, may not be considered a moving violation, nor may civil action be taken.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Maryland Vehicle Statutes

- "PRIVILEGE" and "EXEMPTION" demand due regard, care & caution by the Emergency Vehicle Operator
- "DUE" always imports a fixed obligation or liability.
- "CARE" refers to avoiding a collision
- "DUE AND REASONABLE CARE" refers to the "Doctrine of Reasonable Man"



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Legal Definitions

- "A **TRUE EMERGENCY** is a situation in which there is a high probability of death or serious injury to an individual or significant property loss, and action by (you) an emergency vehicle operator may reduce the seriousness of the situation."

U.S. Department of Transportation

*"Emergency Vehicle Operators Instructor Course Manual"*



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Legal Definitions

### Negligence

- A legal deficiency or wrong that results whenever a person fails to exercise that degree of care that a prudent person would exercise under similar circumstances

## Legal Definitions

### Gross Negligence

 
- The reckless disregard of the consequences of an act of another person

 
### Willful and Wanton

- Intentional or with careless indifference (considered the most serious form of negligence)

## Case Study

### TW 17 Fatal Collision June 22, 2000

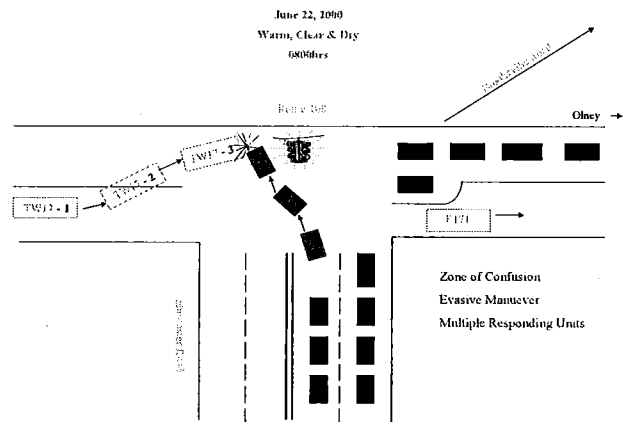

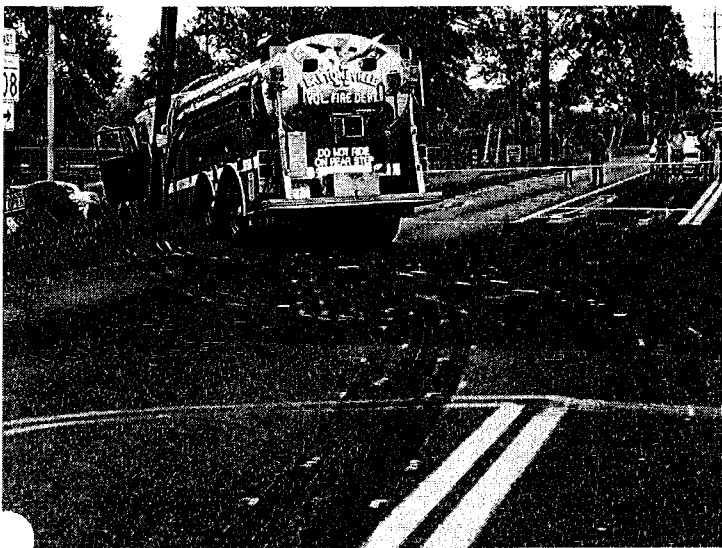



## Safe Emergency Vehicle Operation Policy # 808

Review Policy Now



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



### Vehicle Backing

- If you can avoid backing, don't do it!
- Never be in a hurry when backing.
- If there is no spotter available:
  - Reconsider backing up. Is it really necessary?
  - Make a reasonable attempt to get someone to act as a spotter.
  - If a spotter cannot be obtained, get out the unit and walk around the unit completing a "circle of safety" and survey the backing area. Before proceeding to back unit, being sure to also check overhead clearance.
  - Give a final warning of two horn blasts just prior to backing.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



### Vehicle Backing

#### Driver Responsibilities

- Bring the unit to a complete stop.
- Roll window down completely.
- Make visual and verbal contact with the spotter. "If you cannot see or hear the spotter, do not backup!"



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Vehicle Backing

### Driver Responsibilities

- Driver and spotter must establish and continue eye contact in the left rear view mirror at all times.
- Drivers must have a thorough knowledge of spotter hand signals.
- The spotter hand signals to the driver indicating it is safe to begin backing.
- The driver gives a two blast warning on the horn just prior to backing.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Vehicle Backing

### Spotter Responsibilities:

- Conduct a "circle of safety" and survey the backing area and all other sides of the vehicle checking for hazards. Before proceeding to back unit, being sure to also check overhead clearance.
- Communicate any observed hazards to the driver.
- Place yourself eight to ten feet to the left rear of the unit. Try to observe both sides of the vehicle



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Vehicle Backing

### Spotter Responsibilities:

- Establish visual and verbal contact with the driver and continue eye to eye contact in the left rear view mirror at all times.
- Be familiar with hand signals before allowing backing maneuvers to begin.
- Stop the driver if any hazards are observed or if you are uncertain of the direction that the driver is maneuvering.

 


Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SAFE SPOTTING

Spotters position themselves outside the rear hazard zone. The operator should stop the vehicle if the spotters are not visible or lack eye contact with the mirror.

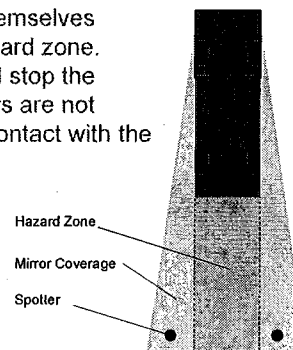

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## At Risk Behaviors

- Weight Restricted Bridges
- Distracted Drivers
- Influence of Drugs and Alcohol
- Emotional Drivers



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## Review

- Why Class "B" Driver Course
- Driver & Officer Responsibility
- Motor Vehicle Statutes
- Legal Definitions
- Safe Vehicle Operation Policy
- Safe Driving Principles/At Risk Behaviors




Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1




## DRIVING RANGE RULES AND REGULATIONS



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



Emergency Vehicle Operator's must not lose sight of the fact that controlled/monitored range activities are designed to simulate actual operational conditions. Speeds are controlled for the roadway conditions. During actual emergency responses, conditions, roadway dynamics, an Emergency Vehicle Operator's attitude will be dramatically altered. This is when a crash might occur.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



## OBJECTIVES

### THE STUDENT WILL BE ABLE TO:

- Orally explain applications of rules and procedures during driving range exercises
- Demonstrate applications of rules and procedures during driving range exercises

## OVERVIEW

- Safety Rules
- Straight Line & Diminishing Lane Clearance
- Turning Around
- Stall Parking/Front
- Stall Parking/Alley Dock
- Lane Change/Off set Alley
- Serpentine/Forward & Reverse
- Parallel Parking

Montgomery County Fire and Rescue

 
Class "B" Driver Course Session 1-1  
Version 08-1

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SAFETY RULES

The proper use of mirrors can't be emphasized enough. EVs are bigger, and slower, and occupy more lane space. Consequently other drivers will make attempts to pass and drive in blind spots. The outside mirrors are the only source which will allow the EVO to see what's next to and behind the vehicle.

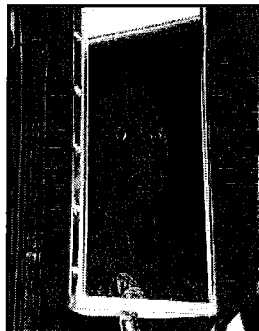

- Headlights are on at all times.
- No vehicles/ drivers on range during exercise. Except Back up & Safety
- All vehicle safety belts will be worn.
- Resetters wear safety vests.
- Fire extinguishers on all active vehicles.
- Maximum speed 15-25 mph.
- Signal driver by verbal and/or visual.

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SAFETY RULES

- Vary cone space to accommodate vehicle.
- All vehicles are inspected PRIOR to use on the range.
- Dress appropriately for the weather.
- Have a safety officer.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SAFETY RULES

 
- Maintain secure area for exercises.
- Set up uniform hand signals for backing
- Monitor use of range safety equipment.
- Control all people & vehicles on range.
- Alert lead instructor of unsafe conditions
- Stop all unsafe activities immediately.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## Pivot Point

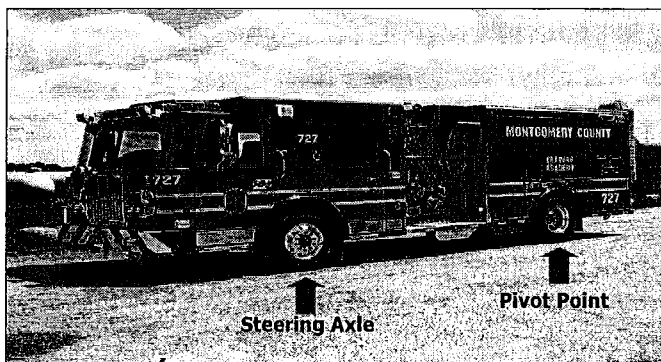

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


## DIMINISHING LANE

 - Measures the Emergency Vehicle Operator's ability to:
  - Steer emergency vehicle in a straight line while backing
  - Judge distance to objects
  - Stop within one foot of an object
- Provides practice in:
  - Negotiating a narrow track with a wide vehicle
  - Maintaining a straight path of travel

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## DIMINISHING LANE CLEARANCE

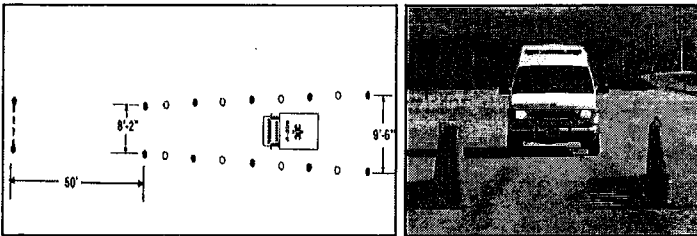

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


## TURNING AROUND

 - Measures Emergency Vehicle Operator's ability to turn Emergency Vehicle around in a confined space to move or reposition.
- Provides practice in pulling into a narrow space and backing up.
- Helps develop valuable skills for making various types of turnabouts.

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## CONFINED SPACE TURN AROUND

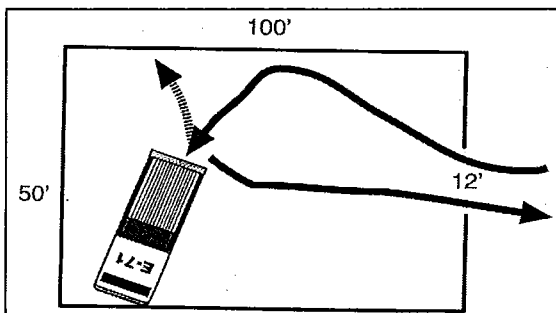

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## STALL PARKING

 
Measures Emergency Vehicle Operator's Ability To:

- Drive past a docking bay, reverse direction, and back into the space.
- Back down a confined area/ street with vehicles on either side.



Montgomery County Fire and Rescue

## STALL PARKING EXERCISE

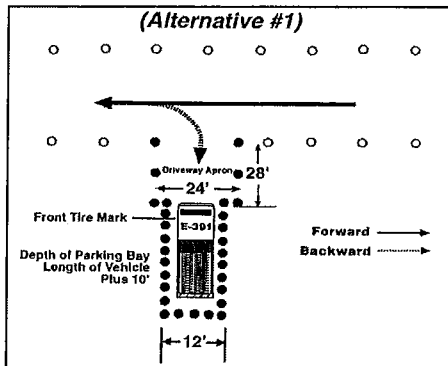

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


## LANE CHANGE/OFF SET ALLEY

 - Measures Emergency Vehicle Operator's ability to make sharp turns & steer the Emergency Vehicle in close boundaries.
- Provides practice in making right & left turns, and establishing precise alignment.
- Easier to stop <25 mph; swerve >25 mph

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


## LANE CHANGE

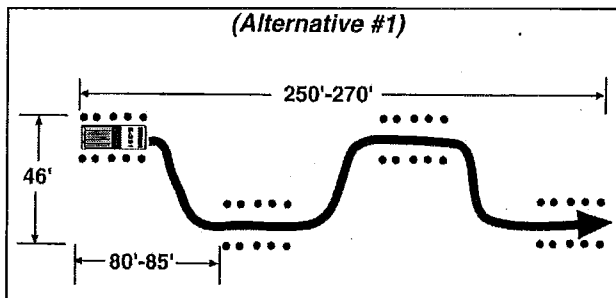

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SERPENTINE EXERCISE

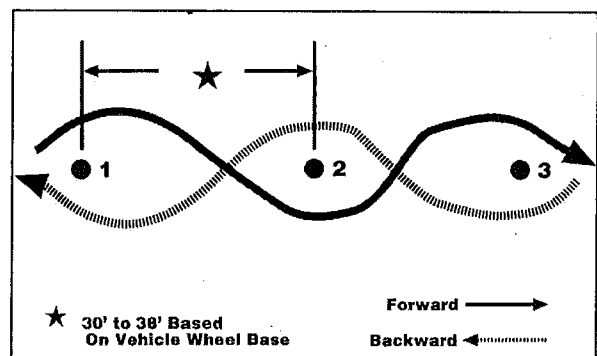 

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## SERPENTINE EXERCISE

 
- Measures ability of Emergency Vehicle Operator to steer within close quarters without stopping.
- Sets the stage for responses with left/right lateral evasive maneuvering.



Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1


## PARALLEL PARKING

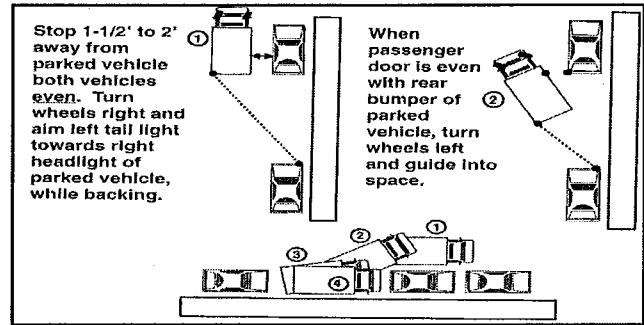

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## PARALLEL PARKING

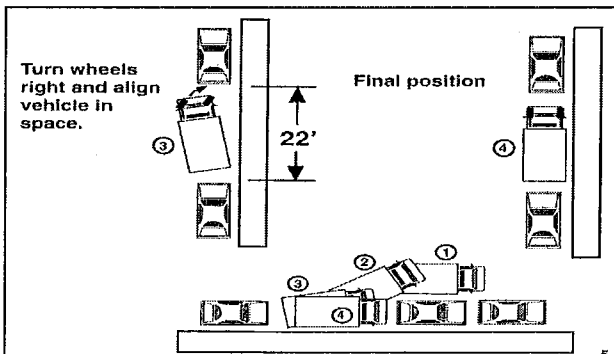 

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1

## REVIEW

- Safety Rules
- Straight Line & Diminishing Lane Clearance
- Turning Around
- Stall Parking/Front
- Stall Parking/Alley Dock
- Lane Change/Off set Alley
- Serpentine/Forward & Reverse
- Parallel Parking

Montgomery County Fire and Rescue

Class "B" Driver Course Session 1-1  
Version 08-1



**PERMISSION FOR TRANSPARENCY USE**

© 2003 Smith System Driver Improvement Institute, Inc.  
All rights reserved. No part of this publication may be reproduced without written permission other than as specifically provided below. "SMITH SYSTEM" and each of the 5 Keys, "AIM HIGH IN STEERING", "GET THE BIG PICTURE", "KEEP YOUR EYES MOVING", "LEAVE YOURSELF AN OUT", and "MAKE SURE THEY SEE YOU" are registered service marks of Smith System Driver Improvement Institute, Inc.

**Limited Permission for use of PowerPoint Presentation™ and to Create Overhead Transparencies**

Pages A-N of this Instructor Training Manual and the PowerPoint™ presentation titled "Smith System Certified Instructor Presentation" (hereinafter collectively referred to as the "Property") contain intellectual property and service marks that are the property of Smith System Driver Improvement Institute, Inc. (hereinafter referred to as "Smith"). In recognition of the need to support your classroom presentation with visual aids, Smith hereby grants permission for each participant successfully completing our Instructor Training Course to make one copy of the "Property", to be reproduced in the form of overhead transparencies. The "Property" and any overhead transparencies containing the "Property" may only be used for internal training purposes by those completing our Instructor Training Course and not on a for-fee basis. No further use of the "Property" is authorized or implied.

No electronic broadcast or distribution of the "Property" is permitted without prior written permission from Smith.



*Changing Driving  
Habits Since 1952*

**Smith System Driver  
Improvement Institute, Inc.**

**Arlington, TX 76006**

***SOME HISTORY...***

- ⇒ Developed by Harold Smith in 1948
- ⇒ Established as a company in 1952
- ⇒ Incorporated in California in 1961

***We've worked with over half the  
Fortune 500***

 
- ⇒ FEDEX
- ⇒ BELL SOUTH
- ⇒ EXXONMOBIL
- ⇒ GENERAL ELECTRIC
- ⇒ JOHNSON & JOHNSON
- ⇒ ROADWAY EXPRESS



## TRAFFIC COLLISION TRIANGLE

Source: NHTSA Traffic Safety Facts 2003


For each death  
there are:

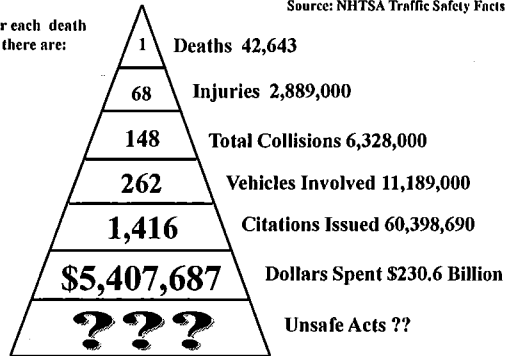

Can you afford to be involved?

## CAUSES OF COLLISIONS

 - ⇒ Inattention
- ⇒ Impairment
- ⇒ Tailgating
- ⇒ Weather
- ⇒ Fatigue
- ⇒ Roads
- ⇒ Speed
- ⇒ Health
- ⇒ Attitude
- ⇒ Inexperience
- ⇒ Other Drivers
- ⇒ Vehicle Condition

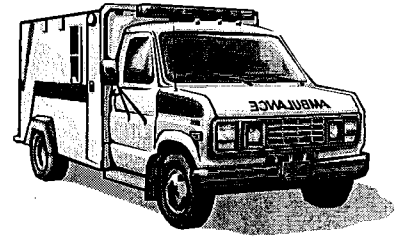

## USE OF THE 5 KEYS PROVIDES:

- ⇒ *SPACE for the vehicle*
- ⇒ *VISIBILITY for the driver*
- ⇒ *TIME to make decisions*

## THE BENEFITS:

- ⇒ Reduced Collision Potential
- ⇒ Reduced Fuel Usage
- ⇒ Reduced Maintenance
- ⇒ Lower Insurance Expense
- ⇒ Reduced Anxiety and Stress





## **5 KEYS OF THE SMITH SYSTEM®**

**Key 1 AIM HIGH IN STEERING®**

**Key 2 GET THE BIG PICTURE®**

**Key 3 KEEP YOUR EYES MOVING®**

**Key 4 LEAVE YOURSELF AN OUT®**

 
 
**Key 5 MAKE SURE THEY SEE YOU®**

 
 
 
 
### **Key 1 Aim High In Steering®**

⇒ An animal's eyesight is suited to its survival needs


⇒ Average drivers have 3 - 6 seconds of Eye Lead Time

⇒ Expand your Eye Lead to a minimum of 15 seconds

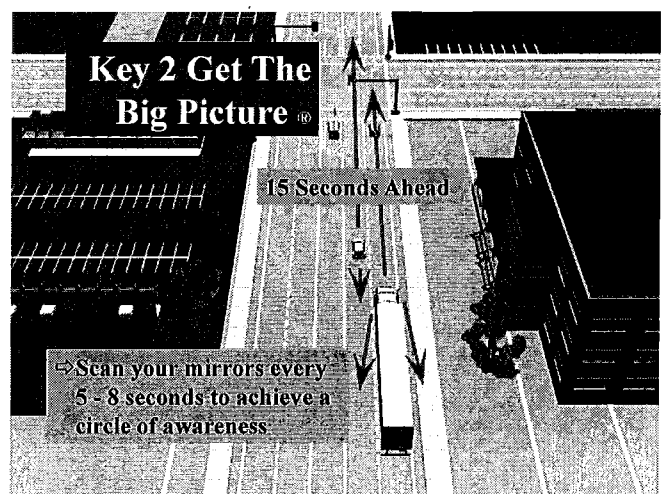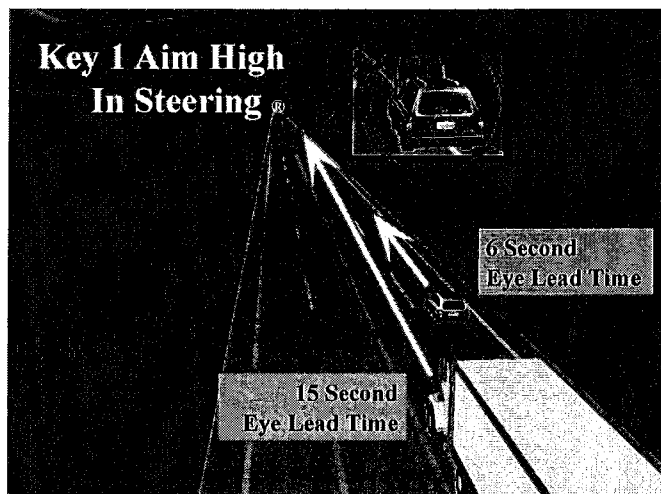

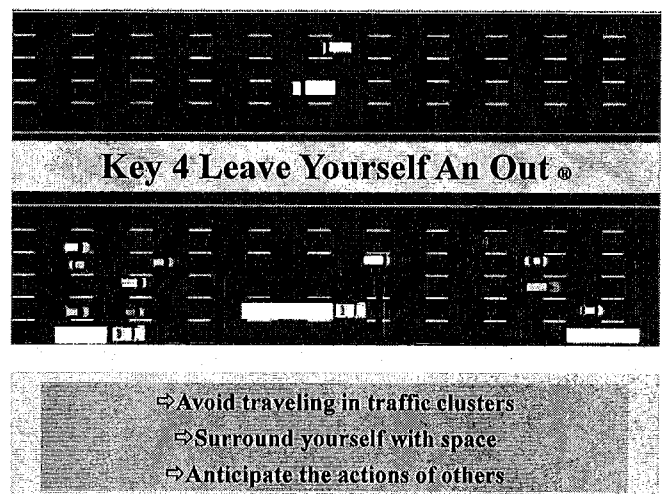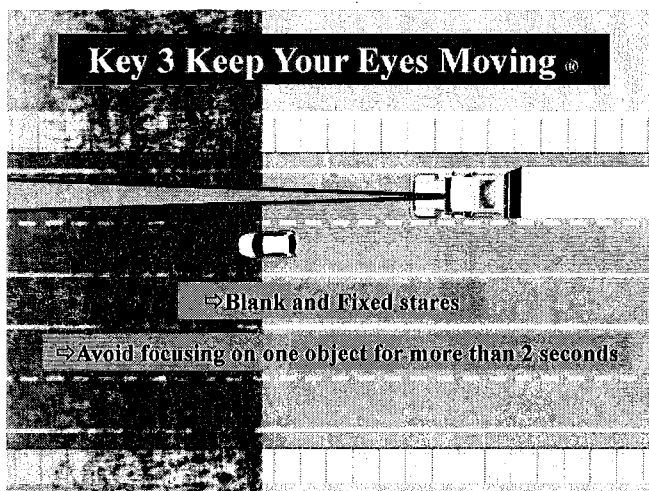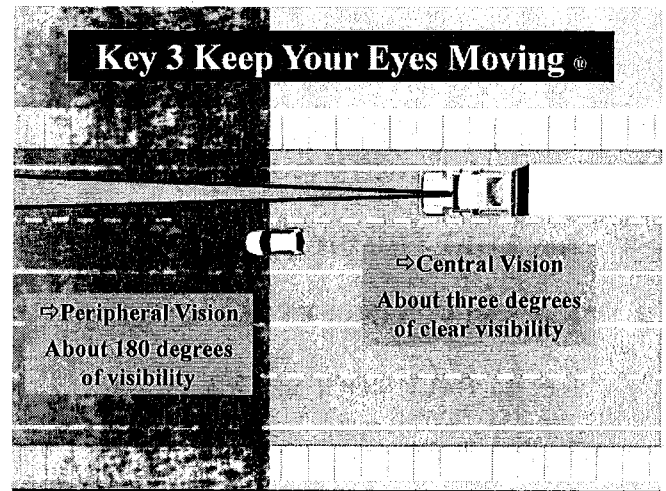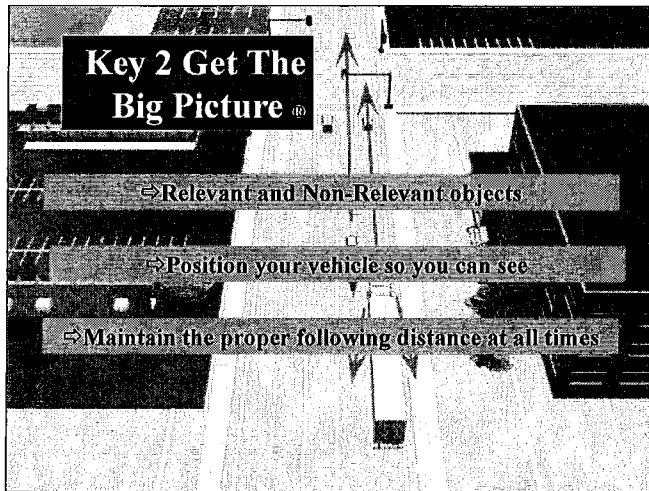

### Key 5 Make Sure They See You<sup>®</sup>

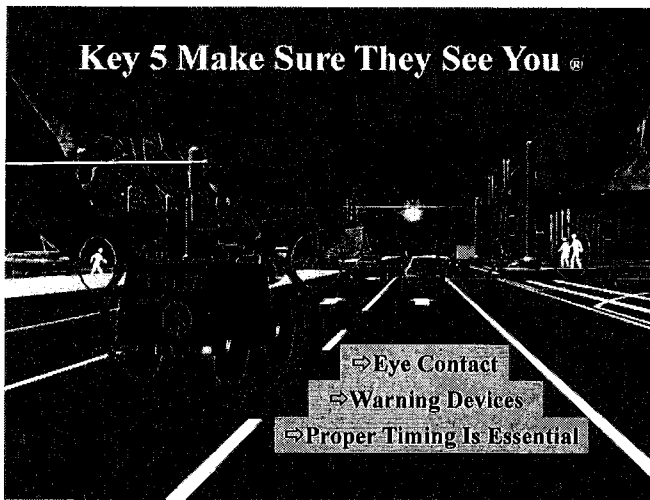 

## REMEMBER THE 5 KEYS

### Key 1 AIM HIGH IN STEERING<sup>®</sup>

⇒ Look ahead a minimum of 15 seconds

### Key 2 GET THE BIG PICTURE<sup>®</sup>

⇒ 4-second minimum following distance

⇒ Scan mirrors every 5 - 8 seconds

### Key 3 KEEP YOUR EYES MOVING<sup>®</sup>

⇒ Avoid focusing on one object for more than 2 seconds

### Key 4 LEAVE YOURSELF AN OUT<sup>®</sup>

⇒ Surround yourself with space

### Key 5 MAKE SURE THEY SEE YOU<sup>®</sup>

⇒ Eye contact

 
 
 
## THE 5 KEYS TO SAFE BACKING



**MANY FLEETS REPORT THAT MORE THAN 30%  
OF THEIR INCIDENTS HAPPEN WHILE  
BACKING**

## WHY DO BACKING COLLISIONS HAPPEN?

- ⇒ Backing Unnecessarily
- ⇒ Blind Areas
- ⇒ Vehicle Design
- ⇒ Infrequent Practice
- ⇒ Limited Mental Preparation For Backing
- ⇒ Inadequate Information During Backing

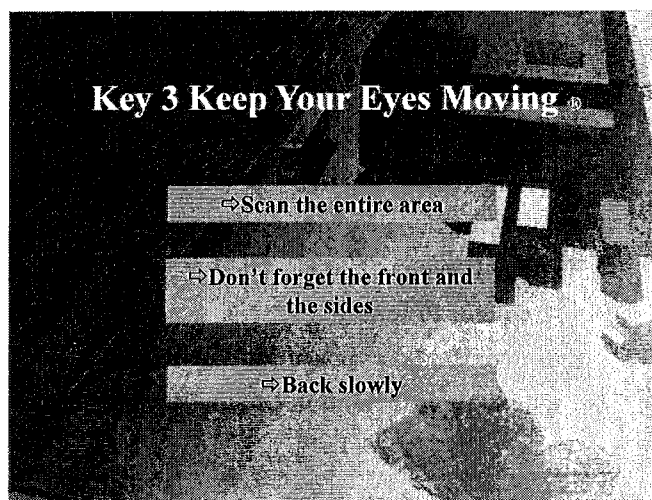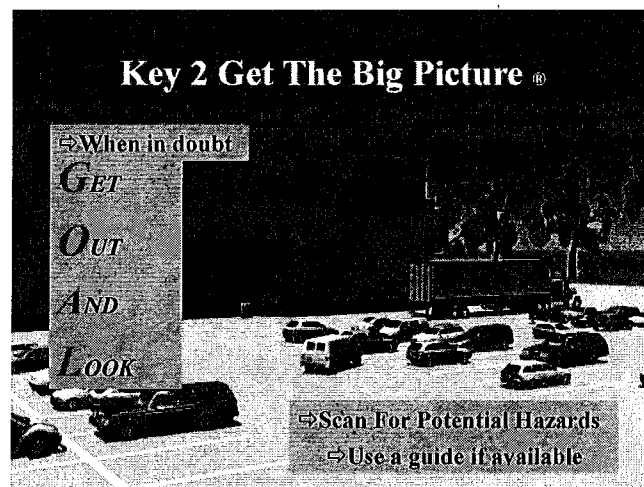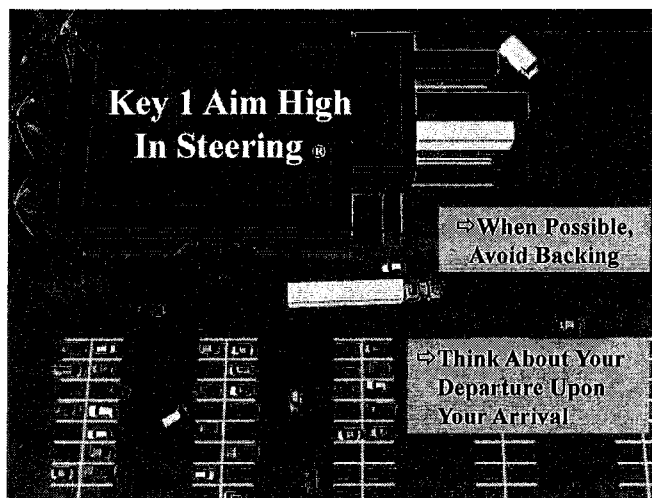



***When possible, avoid backing!***  
***If you must back...***

**Key 1 AIM HIGH IN STEERING®**

⇒ Choose the safest location possible

**Key 2 GET THE BIG PICTURE®**

⇒ Search for all potential hazards

**Key 3 KEEP YOUR EYES MOVING®**

⇒ Scan, don't fixate

**Key 4 LEAVE YOURSELF AN OUT®**

⇒ Surround yourself with space

**Key 5 MAKE SURE THEY SEE YOU®**

⇒ Use warning devices - Make eye contact



# **Emergency Vehicle Inspection, Preparation, And Driving Techniques**

## **INTRODUCTION**

The intent of this portion of the manual is to provide the candidate with the information needed to safely and efficiently operate emergency apparatus. This section includes but is not limited to vehicle knowledge and inspection, general operation and safety features of the vehicle, and proper driving techniques in normal as well as emergency operations.

The candidate must be completely knowledgeable in all aspects of the vehicle they intend to operate. It is important the candidate is able to demonstrate safe driving habits and is fully knowledgeable of the safety features inherent to the vehicle. The candidate shall be able to identify the various components of the vehicle and explain their use. The candidate will be able to identify any defects, make minor repairs, and understand when the vehicle is to be placed out of service due to safety reasons or major defects. In turn the candidate will be able to complete the necessary documentation required by the Department.

## **OBJECTIVES**

Upon completing this module of the Driver Training Manual, the candidate will be able to correctly identify, maintain, evaluate, adjust, and operate an emergency vehicle. This will involve: being able to identify major components of an emergency vehicle and being able to prepare the vehicle for an emergency response. These operations will include - preventive maintenance, pre-response preparation, safety checks and adjustment. The candidate will know, understand, and successfully demonstrate safe and correct handling of the vehicle in routine, emergency, and dangerous driving situations.

## VEHICLE INSPECTION AND DRIVING PREPARATION

### Major Motor Vehicle Components

There are many motor vehicle components to be discussed when describing any motor vehicle and some are specifically associated with emergency vehicles. The following is a list of components covered in this section:

- Vehicle characteristics – height, weight, length, and width
- Motor / engine components
- Braking systems: drum, disc, air, ABS, and engine retarders
- Exhaust systems
- Driveline
- Steering system
- Electrical system
- Suspension
- Wheels and tires

### VEHICLE CHARACTERISTICS

The characteristic of an emergency vehicle affects the impact on the physical forces of the vehicle. The **height, weight, length, and width** of the vehicle are those items that are going to affect to the action and reaction of the vehicle while it is in motion. These items limit the direction of travel of the vehicle due to weight limitations (bridges), height constraints (overpasses), and width restrictions (tunnels).

**Height:** It is important to know the *overall* height of the vehicle including all lights and other equipment mounted on the top of the vehicle. The operator should be able to recognize not only structural overhangs but also other potential problems, for example tree limbs, power and phone lines, and any other low hanging objects. It is also important to understand the vehicle height plays a roll in how the vehicle is going to handle in terms of braking and turning. The taller the vehicle is the higher the center of gravity. This is important when making turns. Because the center of gravity is higher, the potential for rollover is higher if the vehicle is exceeding a safe turning speed. This higher center of gravity changes the braking on the vehicle as well.

**Weight:** The GVW (gross vehicle weight) is vital to know because of bridge and road limitations. It is important to remember that there is a safety factor assigned for every weight limitation on bridges. This is done to provide a GVW allowance to safely cross a given bridge. The posted weight is much less than the actual weight limit that the bridge or overpass can take. However, alternate paths should be considered when possible to avoid crossing those bridges that are



close to the weight of the vehicle. As with height, the weight of the vehicle is a major influence on the vehicles handling. The weight of the vehicle has a direct impact on the braking system. The weight distribution between the front and rear axle must be appropriately distributed. When at all possible the vehicle should have approximately 1/3 the weight over the front axle and 2/3 of the weight over the rear axle. Additionally the weight should be distributed evenly from side to side when possible. If the distribution is done correctly the braking system will work to maximum capability.

**Length:** The length of the vehicle is important to know in terms of turning radius (wheel base contingent) and angle of approach and angle of departure. It is safe to assume that the longer the vehicle the wider the turning radius must be. The angle of approach and departure are important when moving across hills. These are the smallest angles made between the road surface and a line drawn from the point of ground contact and either the front or rear of the tire to any projection of the apparatus. This is important so that the front or rear bumpers or any object of the undercarriage of the vehicle does not come into contact with the road surface.

**Width:** The width of the vehicle comes into play when driving into diminished clearance environments. It is important that the width of the vehicle is the *overall* width that includes mirrors and any piece of equipment mounted to the exterior of the vehicle.

## **MOTOR/ENGINE COMPONENTS**

There are two types of engines, gasoline and diesel. Their components are very similar in nature. The primary concern to the operator is the type of fuel used by the engine. Care should be taken to ensure the proper fuel is used. The following is a list of the basic components in the motor compartment of the vehicle.

**Engine Block:** The engine block is where the pistons perform the work to create the motion of the vehicle. The block becomes extremely hot during the operation of the vehicle. Oil and antifreeze pass through the block during its operation.

**Radiator:** The radiator contains the fluid used to keep the engine block from overheating. The cooling system is a closed system working under a vacuum.  
**\*\* NOTE \*\*** The fluid in this system becomes extremely hot and should not be handled until cooled.

**Battery(s):** The batteries are the start of the electrical system. They are used in starting the vehicle and maintain electrical components during the operation of the vehicle. The standard starting circuit contains two 12-volt batteries wired in parallel. On some vehicles there is a selector switch to opt for either or both batteries. The switch indicates which battery is being charged. It is important to note not to turn off the battery switch while the engine is running. This will cause damage to the alternator and electrical system. If the batteries need to be charged, only charge one at a time, and not both, on the selector switch. Charging both could cause one battery to receive an excessive charge, causing the contents to boil, resulting in battery damage or destruction. **\*\* NOTE \*\*** The battery (s) contain acid which will harm you if you come in contact with it.

**Power Steering Pump:** The power steering pump maintains the fluid used to assist in steering the vehicle. The fluid in this system can be checked either while the engine is cold or hot. There are differentiating indicator marks on the dipstick for this purpose.

**Brake Master Cylinder:** This unit contains the fluid used to operate the braking system. **\*\* NOTE \*\*** This is not used with air braking systems.

**Fan/Accessory Belts:** These belts are used to turn the cooling fan for the radiator and provide a means of recharging the batteries through the alternator.

## **BRAKING SYSTEMS**

A vehicle's braking system is comprised of fluids that transmit forces to the vehicle wheel brakes. This is either done by a hydraulic (liquid) system or a pneumatic (air) system.

There are generally two types of braking devices that can be on the vehicle, *drum* and/or *disc* brakes. *Drum* brakes are two brake shoes that push outward and press the drums when the brakes are applied. The pressure on the brake pedal causes fluid or air to flow into the brake cylinder. The cylinder moves the brake shoe outward against the brake drum (inner surface of the metal wheel). The pressure of the shoe against the drum causes the wheel to slow or stop. *Disc* brakes are comprised of a rotor and a caliper that squeeze the brake pads to stop the vehicle. The rotor is the disc and is attached to the wheel axle. When the brake pedal is depressed, a hydraulic piston in the caliper causes the caliper to squeeze together, bringing a pair of brake shoes into contact with the rotor. The friction of the opposing brake pads as they squeeze the rotor slows the rotor rotation and causes the wheel to slow and stop.

It is important to break down the pneumatic (air) system into its components because most of the apparatus is equipped with "air brakes". Air brakes use compressed air to make the brakes work. An air brake system is comprised of three (3) different systems: service brake, parking brake, and emergency brake systems.

- The *service brake* system applies and releases the brakes when you depress the brake pedal during normal driving operations.
- The *parking brake* system applies and releases the parking brakes when you use the parking brake control.
- The *emergency brake* system uses parts of the service and the parking brake systems to stop the vehicle in the event of a brake system failure.

There are many components of the air brake systems. The following are some parts of the system:

**Air compressor** – The air compressor pumps air into the air storage tanks. The compressor is connected to the engine through gears or a V-line belt. The compressor may be air or oil cooled.

**Air Compressor Governor** – The governor controls when the air compressor will pump air into the air storage tanks. When the air tank pressure rises to a preset level (around 125 psi) the governor stops the compressor. When the tank pressure falls below a preset level (around 100 psi) the governor allows the compressor to start pumping again.

**Air Storage Tank** – Air storage tanks are used to hold the compressed air. The number and the size of the tank(s) depend on the size of the vehicle. The tanks will hold enough air for the brakes to be used several times if the compressor fails to work. Compressed air usually has some moisture in it, which is bad for the air brake system. The water can freeze up in cold temperatures and make the brake system fail. The moisture tends to collect at the bottom of the air storage tanks. To ensure the moisture is removed from the tanks; each is equipped with a method of *bleeding* the tank. There is a manual method, which is done by either turning a stopcock valve located at the bottom of the tank allowing the air and moisture to be removed, or by pulling on a cable attached to a bleed off valve located at the bottom of the tank allowing the air and moisture to be removed. **\*\*NOTE\*\*** It is important to remember that once the tanks have been bled the system must be recharges prior to moving the vehicle. In some vehicles there is an *automatic bleed and dryer*. The automatic system responds by bleeding small amounts of air during normal operations. This has little impact on the operation of the brakes but does remove the moisture from the system. In addition there is a dryer attached to the system, which heats the air to keep the moisture level down in the system.

**Safety Valve** – A safety valve is installed in the first air tank the air compressor pumps air to. This valve protects the tank and the rest of the system from being over pressurized. This valve is usually set to release at 150 psi. **\*\*NOTE\*\*** If this safety valve releases air there is a problem that a mechanic should be notified immediately.

**Brake Pedal** – To apply the brakes you press down on the brake pedal. Pushing the pedal down harder applies more air pressure. Letting up on the brake pedal reduces the air pressure and releases the brakes. Releasing the brakes lets some of the compressed air to go out of the system, so the air pressure in the tanks is reduced. Pressing and releasing the pedal unnecessarily can let air out faster than the compressor can replace it. If the pressure gets too low the brakes will not work.

**Foundation Brakes** – Foundation brakes are used at each wheel. The most common type is the S-cam drum brake. The following is the break down of the brake parts:

- **Brake drums, shoes, and linings** – Brake drums are located on each end of the vehicle's axles. The wheels are bolted to the drums and the braking mechanism is inside the drum. To stop, the brake shoes and linings are pushed against the inside of the drum. This causes friction, which slows the vehicle (and creates heat). The heat a drum can take without damage depends on how hard and how long the brakes are used. Too much heat can make the brakes stop working.
- **S-cam Brakes** – When you push the brake pedal, air is let into each brake chamber. Air pressure pushes the rod out, moving the slack adjuster, thus twisting the brake camshaft. This turns the S-cam (named because of its S design). The S-cam forces the brake shoes away from one another and presses them against the inside of the brake drum. When you release the brake pedal, the S-cam rotates back and a spring pulls the brake shoes away from the drum, letting the wheels roll freely again.
- **Wedge Brakes** – In this type of brake, the brake chamber push rod pushes a wedge directly between the ends of the two brake shoes. This shoves them apart and against the inside of the brake drum. Wedge brakes may have a single brake chamber, or two brake chambers, pushing wedges in at both ends of the brake shoes. Wedge type brakes may be self-adjusting or may require manual adjustment.
- **Disc Brakes** – In air-operated disc brakes, air pressure acts on a brake chamber and slack adjuster, like S-cam brakes. But instead of the S-cam, a "power screw" is used. The pressure of the brake chamber on the slack adjuster turns the power screw. The power screw clamps the disc or rotor between the brake lining pads of a caliper, similar to a large C-clamp.

**Supply Pressure Gauge(s)** – All air-brake vehicles have a pressure gauge connected to the air tank. If the vehicle has a dual air brake system, there will be a gauge for each half of the system. (Or a single gauge with two needles). These gauges let you know how much pressure is in the tanks.

**Low Air Pressure Warning** – A low pressure warning signal is required on all vehicles with air brakes. A warning signal you can see must come on before the air pressure in the air tanks falls below 60 psi. The warning is usually a red light and on some vehicles a warning buzzer sounds as well.

**Stop Light Switch** – Drivers behind you must be warned when you put your brakes on. The air brake system does this with an electric switch that works by air pressure. The switch turns on the brake lights when you are applying the brakes.

**Spring Brakes** – All vehicles must be equipped with emergency brakes and parking brakes. They must be held on by mechanical force (because air pressure may leak out). Spring brakes are used to meet these needs. When driving powerful springs are held back by air pressure. If the air pressure is removed, the springs put on the brakes. A parking brake control in the cab allows the driver to let the air out of the spring brakes. This lets the spring brakes on. A leak in the air brake system, which causes all the air to be lost, will also cause the springs to put on the brakes.

**Parking Brake Controls** – In most vehicles, you apply the parking brakes using a *diamond-shaped, yellow, pull-push control knob*. You pull the knob out to put the parking brakes on (spring brakes), and you push it in to release them. **\*\*NOTE\*\*** Never push the brake pedal down when the spring brakes are on. The combined forces of the springs and the air pressure could damage the brakes.

Apparatus equipped with air brakes use two methods for parking brakes. First is a driveline brake, which is an actual disc or drum that attaches to the drive shaft and is operated by cables or levers. The second type is a spring-activated brake atop a service brake chamber that automatically applies the brake when the air pressure drops below a preset pressure.

It is important to define what a *Dual Air Brake System* is. Most new vehicles use a dual air brake system for safety reasons. A dual air brake system has two separate air brake systems that use a single set of brake controls. Each system has its own tanks, hoses, and lines, etc. One system typically operates the regular brakes on the rear axle(s). The other system operates the regular brakes on the front axle. The first system is called the primary and the other called the secondary system.

Many vehicles are equipped with *Antilock Braking Systems (ABS)*. The purpose of the *ABS* is to permit the driver of the vehicle to stop the vehicle in the shortest possible distance while maintaining full control. By preventing the wheels from locking, *ABS* helps to improve control and stability. *ABS* allows steering during braking applications, and in most instances, reduces stopping distances, especially on wet, icy, or loose gravel surfaces. *ABS* use sensors at each of the wheels to send wheel speed information to a central computer. When the computer senses that a wheel is about to lock up, it automatically "pumps" the brakes on that wheel.

Due to the size and weight of today's apparatus, secondary or auxiliary braking systems have been added to increase the braking capabilities of the vehicles. Essentially there are three (3) types of auxiliary braking systems:

- Engine Brake
- Automatic Transmission Retarder
- Driveline Retarder

The *engine brake* is known as a compression brake. The brake mechanism uses the "compression" that the engine creates to slow the vehicle down. Essentially the system is allowing more new air into the cylinders of the engine causing it to work or bear down harder creating less horsepower and a force. The *engine brake* customarily comes with a selection switch allowing the driver to decide on the amount of work the braking system should do (2 cyl, 4 cyl, 6 cyl) or high or low. It should be noted that *engine brakes* on vehicles with automatic transmission are typically not effective below 20 miles per hour (mph) due to the low rpm's of the engine while operating at low speeds. **\*\*NOTE\*\*** Most manufacturers recommend the retarder be turned off during inclement weather or slippery road conditions.

The *automatic transmission retarder* is attached to the transmission either on either end of the transmission. The input retarder operates on the input end and the output retarder, which is the most prevalent on fire service apparatus, is attached to the output end of the transmission. The retarder system is self-contained and consists of a vaned rotor, which rotates in a vaned cavity. The rotor is splined to and driven by the output shaft. An external accumulator holds transmission fluid until the retarder is activated. When activated, the fluid in the accumulator is pressurized and directed into the retarder cavity. The interaction of fluid with the rotating and stationary vanes causes the retarder rotor speed, and hence the output shaft, to decrease and slow the vehicle. **\*\*NOTE\*\*** Most manufacturers recommend the retarder be turned off during inclement weather or slippery road conditions.

The *driveline retarder* can be divided into 2 types, hydraulic and electromagnetic. Both types are attached to the driveshaft between the transmission and the rear axle. The hydraulic type absorbs energy by pumping oil around the driveshaft slowing the vehicle down. The electromagnetic retarder sets up a magnetic field that grabs the driveline. The absorbed energy is transferred to the surrounding atmosphere as heat. **\*\*NOTE\*\*** Most manufacturers recommend the retarder be turned off during inclement weather or slippery road conditions.

## **EXHAUST SYSTEMS**

The exhaust system is basic and is comprised of a muffler or mufflers, exhaust pipes, tail pipes, and or vertical stacks. It is important to note that a faulty exhaust system affects the performance of the motor and can emit poisonous fumes into the crew area causing serious illness.

## **DRIVELINE**

The driveline consists of the transmission, front universal joint, driveshaft, rear universal joint, differential, and the rear axle. The transmission is a system of gears that allows change in the ratio of the number of engine revolutions to the number of wheel revolutions. The drive shaft connects to the rear of the transmission and is powered to turn the differential. The differential is a component of the rear axle that the rear wheels are attached to. The entire system works in unison to rotate the rear wheels.

There are two types of transmissions: standard and automatic. The standard or manual transmission uses a clutch assembly to shift the transmission gears depending on the RPMs of the motor and the desired speed requested. Computer modules control the automatic transmissions. The modules signal and influence the engines RPMs during transitional shifting.

## **STEERING SYSTEM**

The steering wheel and column connect to steer the vehicle. They connect to a gear and linkage mechanism that changes the direction of the front wheels. In most vehicles this either "power assist" or "power steering" to ease the turning of the steering wheel. These are both hydraulic (fluid) driven systems.

## **ELECTRICAL SYSTEMS**

The electrical system supplies power for primary and auxiliary functions. The primary functions of the electrical system include: power the generator and storage battery, generator/alternator, and voltage regulators; power distribution (via engine wiring); timing (distributor); and spark generation if equipped. Auxiliary functions include: inside/outside lighting (headlights; amber, red signaling or warning lights; turn signals; instrument panel lights; etc.); and horn, siren, and public address system.

## **SUSPENSION**

This system is comprised of leaf springs, shock absorbers/coils, air rides, and wheels, and tires that enable the driver to handle the vehicle properly on rough terrain and sharp curves.

## **WHEELS AND TIRES**

As mentioned before the wheels and tires are a part of the suspension system; however, it's important to define them a bit more. Both wheels and tires must have a weight rating which will accommodate the weight distributed through the axle and springs. The condition of the tires is based on inflation, tread design, and tread wear. All of these have a major impact on vehicle handling. Each tire has only about 40 square inches of contact with the road. It is imperative that both the inflation pressure and tread be in good condition to provide maximum safety. The minimum recommended tread depth for emergency vehicles is 4/32 inches.

## **EMERGENCY VEHICLE PRE-RESPONSE PREVENTITIVE INSPECTIONS**

Emergency vehicles of all types should be inspected prior to and again within 24 hours after being used for an emergency response. Emergency vehicle accidents caused by the lack of maintenance or vehicle malfunction are preventable. Physical and visual inspections must be done on a routine basis. In the final analysis, no matter who performs the actual maintenance on the vehicle, it's the driver's responsibility to confirm the vehicle has been inspected prior to use. The driver *must* verify that the vehicle is in proper operating condition. The responsibility for the mechanical safety of the vehicle is that of the driver. *IF IT ISN'T RIGHT, DON'T DRIVE IT.* The purpose of the pre-response preventive maintenance inspection is two fold – identify and correct unsafe conditions.



Inspection guidelines are broken down into nine (9) core areas to expedite the inspection process.

- Check prior maintenance records
- Conduct a vehicle overview
- Conduct an engine compartment check
- Conduct an interior cab check
- Conduct a vehicle walk around check
- Conduct a compartment and equipment check
- Conduct an undercarriage check
- Conduct a moving and driving test
- Complete inspection process

All inspections, maintenance, and repairs must be recorded by the Department. The records must include the date and description of all maintenance, repairs, and inspections performed. The following is a break down of the nine categories listed above:

**Check PM Records** - Each day the records of the previous days should be reviewed for defects and repairs.

**Vehicle Overview** – Conduct a vehicle overview including inspecting for body damage and cleanliness; and leveling of the vehicle (indicates suspension problems).

**Engine Compartment** – Conduct an engine compartment check with the engine off. You should check the following:

- Oil levels
- Coolant levels
- Power steering fluid level
- Transmission fluid level
- Air compression belts
- Hydraulic reservoir
- Brake fluid level
- Battery fluids both left and right
- Windshield washer fluid levels
- Belts and wiring harnesses
- Steering box not leaking
- Safety devices including hood latches and safety bars for tilt cabs

**Interior Cab** – Conduct an interior cab check by first properly preparing for the vehicle inspection:

- Engage the parking brake, chock the wheels, turn the batteries on, turn on the ignition master, place gears in neutral, and start the engine.
- Check the instrument/dash gauges for operating voltages, temperatures, pressures, and levels.
- Check the accelerator pedal padding, in place and not loose.
- Engage and disengage emergency air brake system.
- Conduct air/hydraulic brake test and listen for obvious leaks, and/or blown diaphragms.
- Check steering wheel and column for centering, excessive play (greater than 10 degrees), and abnormal movement.
- Check electric/air horns for equal tone quality from each horn and blown diaphragm for moisture or oil on the windshield of the horn.
- Check electronic and mechanical sirens for excessive draw on ammeter and voltage fluctuations and electrical system problems.
- Check windshield wipers and washers as well as heating and defrosting systems.
- Transmission controls, such as the clutch catch or friction point, should be checked to ensure there is no hang up or binding and that it does not jump out of gear.
- Check radio equipment including fixed, portable, public address system, and cellular phone.
- Interior lighting systems in the cab and crew compartments should be checked to ensure they are working properly.
- Mechanisms for the seat adjustment, both mechanical and pneumatic, should be checked to ensure they are working properly.
- Check seatbelt (occupant restraints) systems.
- Check the interaxle differential locking systems, both dual and tandem axle.
- Check warning lights and buzzers systems, including oil, water, and transmission fluid level and temperature and open door compartment warning lights.
- Ensure outside mirrors, both manual and mechanical, can be adjusted and the wiring for the heating system is intact and operational.
- There should be the appropriate maps and accountability rings/systems on board.
- Internal communication devices and equipment (David Clark Systems) should be checked.
- Check the fast idle RPMs to ensure that it can maintain the electrical system.
- Check emergency lighting.

**Vehicle Walk Around** – Conduct a vehicle walk around and operate and/or check the following:

- Windshield and windows for any cracks that may necessitate taking the vehicle out of service.
- Check headlights, both low and high beams and four way flashers.
- Check the strobe lights and all the emergency vehicle-warning lights.
- Light bars, rotating lights, and/or oscillating lights should be checked.
- Check side markers and reflectors.
- Check turn signals.
- With assistance, check to make sure all the brake lights are operational.
- Check the generator(s) and or auxiliary power devices.
- Check flood light systems.
- Inspect PTO levers/switches.
- Check electrical and mechanical throttle assemblies and extend the outriggers to the maximum positions.
- Check levers and knob controls on all panels.
- On the tires and wheels, check for obvious gouges, slashes, cuts, bubbles, or any other damage. Make sure they are the proper size and are not mismatched. Look for indications of rust or peeling paint on non-aluminum rims. Check the condition of the lug nuts and wheel hubs. Check for any grease leaks. Inspect the rims for damage and missing weights. Make sure the tire pressure is correct and the valve stems are intact with caps. The depth of the tread should be 4/32" in the front and 2/32" in the rear.
- Check the auto chain systems for the rear wheel to make sure they function properly.
- The undercarriage should be checked for any obvious fluid leaks in the engine area (note the color of the fluid leaking).

**Compartment Check** – Conduct the compartment and equipment check:

- Make sure the compartment latching mechanisms work properly.
- Ensure the power equipment (gasoline or diesel) on board is working properly.
- Compartment equipment must match the inventory and are in its proper place.
- Make sure the circuit breakers are working properly.
- Ensure there are sufficient warning devices such as cones, flares, and reflective triangles on board.
- An assortment of fire extinguishers is on board and fully charged.

- Check for appropriate documentation (accident reports, vehicle registration etc.)
- Crew equipment should include SCBA, hand lights, AED, EMS, as the basic, should be checked to ensure they are in working order.
- Ensure all other equipment (haz-mat lights, etc.) is working properly.

**Undercarriage** – Conduct an undercarriage check:

- On the undercarriage bleed the moisture from the air tanks as required to check the color of the fluid being emitted – light gray sludge indicates a bad compressor: leaks from system **\*\*NOTE\*\*** Moisture should be bled from tanks frequently during inclement weather and temperature fluctuations. The brake lines should be checked for cracks, fraying, dry rot, pulling or distortion, or wear marks. **\*\*NOTE\*\*** Check slack adjusters for excessive movement, not more than 1 inch, and whether they are frozen in place. Do not attempt to make slack adjustments; trained personnel should conduct the adjustments.
- The driveline (engine to differential/rear axle) should be properly greased, make sure there is no excessive movement in the joints, and the dust covers are intact.
- Check the exhaust system for soot, black smoke, clamps and hangers, and any pitting on the underside.
- On the suspension system, mechanical or pneumatic, check the leaf springs for cracks and breaks, shackles and hangers, shock towers, and leaks and air leaks (shocks or bags).
- Make sure the automatic chain systems are securely attached and lined up properly.
- Look for obvious damage, such as rust, loose parts, shiny spots, asymmetrical parts (out of alignment), any cracks in the frame rails, and shifting body mounts.
- The inner sides of wheels and tires/ sidewalls on the tires should be checked for excessive dusting, fluid leaks, bad seals, and cracked brake drums and shoes.
- The wiring harness should be checked for frayed or cut wire.
- Check the fuel tank for obvious leaks that straps and grounding pad are intact, fuel lines are ok, and the overflow is not kinked.
- Check for leaks of any fluids and if there is, their point of origin, either the transmission, rear end, or plugs, vents or right side or rear axle. Do not paint over any of these areas.

**Brake Test/Air Brakes** - Conduct a DOT Brake Test. Note: this test is ONLY to be used on apparatus with air brakes. This test is NOT to be used on EMS units. Further information can be found on the MCFRS Quicklinks web page.

This brake test must be performed in the order shown below:

1. Chock the wheels of the vehicle.
2. Turn the ignition on and verify that all gauges/warning devices are in working order.
3. Air brake protection valve should be in the Applied (out) position. This takes the air out of the system and allows the spring brakes to hold the rear brakes.
4. Push air brake protection valve into the off position (in). This charges the air brake system.
5. Allow the air tanks to settle.
6. Observe the air gauge for one minute; look for air loss no greater than 3psi in that one minute.
7. After one minute has elapsed, place your foot on the brake pedal and apply a steady, holding pressure. Continue to hold steady pressure for one minute after air tanks settle.
8. Observe the air gauge during that minute, look for air loss no greater than 3psi.
9. Begin "fanning" the brakes. As air tanks deplete and the gauge reaches 60-90psi, you should get a low air warning light and buzzer.
10. Continue to "fan" the brakes. **NEVER FAN YOUR BRAKES WITH THE PARKING BRAKE APPLIED!**
11. At approximately 20-40psi on your air gauge, the air protection valve should activate. Continue "fanning" the brakes until this occurs.
12. If the valve does not activate, the apparatus fails the test. The unit should be placed Out of Service.
13. If the protection valve activates, stop "fanning" the brakes.
14. Start the engine and monitor the air pressure gauge. The air pressure MUST return from 50psi to 90psi within 3 minutes at 1200rpm.
15. The quick build up system shall provide sufficient air pressure so that the apparatus has no brake drag and is able to stop under operating conditions following the 60 second build up time.
16. Check all gauges for working pressures, shut down engine, remove wheel chock and place unit back in service.
17. MCFRS Air Brake Test - Use the acronym: **COLA**

**C** = Cut In Pressure-A Cut In Pressure will be approximately 100psi. Any compressor that does not cut in before 95psi must be reported to the shop immediately.

**O** = Cut Out Pressure-Cut Out Pressure will be between 120-135psi. Any higher than 135psi must be reported to the shop immediately.

**L** = Low Pressure Warning-Low Pressure devices will activate at approximately 90psi. Any device that activates below 60psi must be reported to the shop immediately.

**A** = Air Leakage-with foot on or off the brake pedal, air leakage should be less than 3psi per minute (4psi per minute for a Tiller Truck).

**Complete Inspection Process** – Document the pre-response inspection and compare it to the previous report. Follow-up on discrepancies noted. If discrepancies are noted that influence on function, operational/directional ability, and/or safety, place the unit out-of-service and consult with the appropriate maintenance personnel before placing the unit back in service for responses.

## **ROUTINE MAINTENANCE ON EMERGENCY VEHICLES**

Operator safety is dependant on the vehicle condition. Well-maintained vehicles have fewer malfunctions and are easier to control. The Department must identify the role of the emergency driver in the inspection and maintenance program. Routine maintenance of the vehicle is the responsibility of the driver. The Department should maintain checklists for these types of inspections and routine maintenance functions. Deficiencies should be repaired or reported in writing to the individual responsible for the maintenance. The role of the emergency driver as it pertains to preventive and routine maintenance is defined in NFPA Standard 1002, Fire Department Vehicle Driver/Operator Professional Standards. Applicable, with minor adjustments, to all emergency vehicles the standards states:

“... Prior to operating fire department vehicles the fire apparatus operator **shall** meet the job performance requirements as defined in ...”

As this relates to the preventative maintenance function, it specifically states that the driver shall be able to “perform routine tests, inspections, and servicing functions on the specified systems and components and ... so that the operational status of the vehicle is verified.”

The systems and components identified in NFPA 1002 are listed here. Items for consideration under each are identified as reference:

### **Battery(ies):**

- Correct fluid levels (distilled water should be used whenever possible to maintain the proper water levels in the battery (ies))
- Connections of the cables are clean and tight
- Battery (ies) box/compartment is clean and secure

**Braking System:**

- Pressure prior to starting the engine (air) should be approximately 125 psi
- Build-up time, if appropriate (air), when the engine is operating at normal RPMs, the pressure should build from 85 psi to 100 psi within 45 seconds in dual air systems. In single air systems, pressure should build up from 50 to 90 psi within 3 minutes when operating at normal RPMs.
- ABS verification (dash light)
- Braking Operation (during runs as well as at inspection time)
- Brake pedal (proper range of motion)
- Moisture in system/drain air tanks, in tanks with manual bleed valves, turn the valve ¼ turn to drain air, moisture, and dirt from system. Return valve to closed position to build up air in system again

**Coolant System:**

- Correct level (generally approximately 2 inches below the top of the radiator, check with local requirements)
- Hose and/or connections wear/leaks

**Electrical System:**

- Ensure all lights and audio equipment is operational, if bulbs need to be replaced make sure the correct bulb size and style is used and replace faulty fuse in audio system if needed.
- Voltmeter should be reading between 12 and 14 volts

**Fuel:**

- Correct level, if not, fill tank with proper type of fuel
- Check any power equipment levels and fill as needed with the proper fuel for that equipment

**Hydraulic Fluids:**

- Check for leaks on the floor under the vehicle and areas around connections of the hoses
- Ensure proper levels and add (if permissible) with the appropriate type of fluid

**Lubrication:**

- Check for leaks on the floor of grease droppings
- Ensure there is not grease thrown in the engine compartment or body
- Use grease gun to fill "zirc" fittings when dry or on scheduled maintenance **\*\*Note\*\*** Do not overfill fittings or it will splatter

**Oil (Engine):**

- Leaks on the floor under the vehicle
- Proper levels checked using the dipstick in the engine compartment **\*\*Note\*\*** The engine oil should be checked when the engine is cool or cold, when the motor is warm or hot the oil is dispersed throughout the engine. To properly check the level the

oil should be allowed to settle back into the oil pan located at the bottom of the engine. This typically takes 20 to 30 minutes after the engine is shut down

- The color and texture of the oil on the dipstick should be noted. If the oil is frothy (bubbly) or a color other than dark brown or black, it should be investigated

**Tires:**

- Condition (sidewalls, rims, tread)
- Correct inflation pressure, fill as needed to the rated pressure for that tire

**Steering System:**

- Ease of operation (power OK and no extra play)
- Correct fluid level, this may be checked while the engine is hot or cold and the fluid level should correspond to that on the dipstick

## **SAFETY CHECKS AND ADJUSTMENTS MADE BEFORE DRIVING**

There are certain items that should be checked by the driver prior to moving the vehicle:

**Occupant Restraint Systems** – Restraints reduce the likelihood of serious injury or death in the event of an accident. The law requires that there be a restraint for all riders and that they be used any and all times the vehicle is in motion. The restraints keep the driver in position behind the wheel and in front of the controls during sharp turns, over excessive maneuvers, roll overs, and yaw skidding or spins.

**Adjustable Head Restraints** – Head restraints help prevent cervical spine and other injuries from hyperextension and hyperflexion; ie. forces resulting from rear end collisions. The proper adjustment for the head restraints is to have the center of the restraint at the center of the skull not at the base of the neck. If the restraint is too low, the neck could be broken if force of impact is great.

**Seat Position** – When the seat is properly adjusted, the brake and accelerator can be applied fully without fully extending the leg. The steering can be held with only a slight bend at the elbows. The seat should be fully locked into position. If the seat was to move during operation, it could cause the driver to lose control.

**Mirrors** – Check for proper adjustment of the inside mirror if applicable. This mirror is used to watch personnel if need be. The outside, side-view mirror should have the edge of the vehicle's rear fender and side lanes visible. Convex mirrors assist drivers by providing wide-angle views of traffic on either side of the vehicle. In all vehicles the most dangerous blind spots are by the rear quarter panels. In larger vehicles there are generally blind spots below the mirrors.



## PRECAUTIONS BEFORE MOVING

The safety of the entire crew pertaining to the vehicle movement is that of the driver. Prior to moving the vehicle an audible signal from all crewmembers that they are belted and ready should be heard by the driver. Only one person (besides the driver) should be in the front seat or control cab. Prior to moving, ensure the station doors are opened, all compartments and cab doors are closed, and there are no obstacles in the path of the vehicle. If responding, ensure that all emergency lights and audible warning devices are on and sounding. Taking these precautions will provide a safe operation of the vehicle.

## OPERATING AN EMERGENCY VEHICLE

### Purpose of Emergency Vehicle Signaling Equipment

Lights and sirens (Emergency Vehicle Signaling Devices) are used to inform traffic, both vehicular and pedestrian, of an emergency vehicle presence and aids in clearing a path for the emergency vehicle. Warning and signaling equipment assist the operator with arriving at an incident safely. Due regard **MUST** always be exercised, regardless of the seriousness of the emergency.

### Local Law (Maryland)

Maryland law requires an emergency vehicle operator to activate and use emergency warning and signaling devices while responding to a "bonafide" emergency call. In return for this, emergency vehicle operators are granted "qualified privilege" with regard to basic rules of the road. To respond to an emergency call, and be covered as an emergency vehicle under statute or law, the emergency vehicle operator must display all appropriate audible and visual warning and signaling devices. Responses to incidents are either emergency or non-emergency. If the operator decides to take advantage of "qualified privilege", full use of audible and visual devices must be used. You can't be selective. It is important to remember use of signaling equipment by the operator **DOES NOT** guarantee operator safety, nor does it free the driver from the possibility of civil or criminal liability if a mishap does occur.

To better understand the liability and responsibility of the driver, a few definitions will be discussed. They are as follows:

- **True Emergency** – is defined as a situation in which there is a high probability of death or serious injury to an individual or significant property loss.
- **Due Regard** – for the safety of others means that a reasonably careful person performing similar duties under similar circumstances would act in the same manner.
- **Negligence** – A legal deficiency or wrong that results whenever a person fails to exercise that degree of care that a prudent person would exercise under similar circumstances.
- **Gross Negligence** – Is the reckless disregard of the consequences of an act to another person. It occurs when a person's actions (or lack of) result in the failure to exercise even a slight degree of care.
- **Willful and Wanton** – Intentional or with careless indifference (considered the most serious form of negligence).
- **Vicarious Liability** – The legal liability placed on one person for the acts committed by another person.

Usually a court will judge the actions of an emergency vehicle driver based on two primary considerations: First, was the emergency vehicle responding to a **true emergency**? Second, did the emergency vehicle driver exercise **due regard for the safety of others**? If the answer to both questions is yes, the emergency driver has demonstrated a responsible and professional attitude through his/her subsequent action(s).

### Using Emergency Vehicle Signaling Equipment

An emergency vehicle driver should use all signaling devices when responding. Remember that most emergency vehicles are taller than the average automobile on the road. You, as a driver should use all means to gain the attention of the vehicles in front of you. When approaching a vehicle from the rear at night, flick the vehicle's high beams on and off to get the attention of the vehicle in front of you.

It's a good practice while responding to an emergency to leave the drivers' and officers' windows down at least partially. This will aid in hearing other responding apparatus, trains, and approaching traffic. Pay attention to the reaction of the other drivers. They, for the most part, are trying their best to move out of your way, however; they are reacting to your actions and not paying attention to the other vehicles on the road. **PAY ATTENTION!**

## **BASIC EMERGENCY VEHICLE CONTROL TASKS**

Steering, accelerating, and braking accomplish directional and velocity control. A competent emergency vehicle driver understands and properly completes all of the basic driving maneuvers necessary to operate the emergency vehicle they are certified to operate.

**Steering** – Steering an emergency vehicle, whether driving non-emergency, responding to an emergency, or making an evasive maneuver, requires certain habits. These include:

- Use both hands on the steering wheel. Exception includes operating another device on the vehicle such as shifting or turning on the windshield wipers.
- Keep arms inside the vehicle. Do not engage in other activities such as drinking, eating, smoking, or talking on the phone while operating the vehicle.
- Maintain hands in the “3 and 9” position on the steering wheel.

**Braking and Stopping** – Effective braking is essential to the safe operation of an emergency vehicle. The intent is to stop the vehicle in as short a distance as possible while maintaining control. In a vehicle with hydraulic brakes, this involves firmly pumping on the brake pedal and releasing it prior to the locking of the wheels. Air brakes require firm and steady pressure without pumping. To have effective braking on a vehicle with anti-lock braking system (ABS), whether installed in conjunction with a hydraulic or an air system, you must follow the procedures below:

- On vehicles equipped with air brakes, the brake pedal should be initially firmly pressed. The driver must ease up as the braking continues, and ease the pressure on the brake pedal just before stopping to avoid a jerking action.
- If the vehicle's wheels lock, immediately release the brake pedal and steer with the skid. Reapply the brakes when control has been established.
- It is important to recognize the continuous braking over a period of time builds up a tremendous amount of heat. This could cause glazing of the brakes that greatly reduces the braking capacity of the system and could cause brake failure.
- On vehicles equipped with a secondary braking system, apply the system in accordance with the manufacturer's recommendations. Recognize that some applications of secondary braking systems can cause a reduction in tire traction.
- In areas where there is a high probability of braking, passing through an intersection or traveling against traffic; the driver should place their foot over (cover) the brake pedal. This action will reduce the reaction time.

**Backing** – Backing mishaps account for a large portion of emergency vehicle accidents. Most backing accidents are relatively minor, however, they can have a wide range of consequences. Accidents keep emergency vehicles out of service for repairs; they cause the operator a lot of paperwork and time, and cost the taxpayers money. These accidents also create a bad public image.

Techniques to minimize backing accidents require common sense. Take a few extra seconds to ensure safety in backing. Plan ahead. Some guidelines for backing an emergency vehicle include:

- Park so as to minimize the need for backing - If thought is given to the position necessary for a vehicle leaving its location, a simple adjustment in the final placement can minimize or even eliminate the need for backing.
- Give audible notice – If the vehicle is equipped with a back-up alarm, shift the vehicle into reverse while applying the brakes. This will initiate most back-up alarms. If the vehicle is not equipped with an alarm, touch the horn lightly 3 times before beginning the backing maneuver.
- Use a spotter – The spotter is to be located at the rear and left of the vehicle. Remember, the driver must be able to see the spotter and vice versa. The driver and the spotter must make mutual eye contact. If the spotter disappears from the mirror, the driver must stop immediately. *IF* a spotter is absolutely unavailable, conduct a walk around the vehicle before backing.
- Understand hand and audible signals – Ensure that the driver and spotter have the same understanding of what the signals mean.
- Use side mirrors – The driver should not attempt to lean out the window or turn around trying to see. Periodically check the right side mirror for objects in the path of the vehicle.
- Check the front corners – Either the right or left front of the vehicle may swing around and strike a fixed object that did not initially appear to be a potential problem.
- Maintain speed control – Backing should be done at an extremely slow speed. It is imperative to maintain tight control on the speed of the emergency vehicle.

The bottom line is this – when you strike something while in reverse and you do not have a spotter in place, you don't have any excuse! If it's predictable it's preventable. There are no excuses for backing accidents when spotters are available.

**Parking** – Good parking skills are essential. Parking is a basic control task, but requires many driving skills. When it is performed under stress, it can be difficult and time consuming. Parking in the emergency mode must be done quickly. It requires skill to do it fast and without mishap. Parking generally consists of three types – angular, perpendicular, and parallel. On an incident any one or all of

these skills may be used to properly place the vehicle. Some factors to take into account when positioning an emergency vehicle are as follows:

- Position emergency vehicles at incidents so as to minimize the blinding effect of warning lights on approaching and passing vehicles.
- Identify potential hazards at the incident and the possibility of escalation.
- Identify appropriate safe distances for certain type of emergencies.
- Consider the ease of leaving the scene because of changing conditions at the emergency incident or a directive to either leave the scene and respond to another incident or be available for another potential incident.

## URBAN DRIVING SKILLS

Even in normal, non-emergency conditions, operating an emergency vehicle in urban areas requires a high degree of skill. Emergency vehicle operator must present good examples to other motorists and pedestrians. The key to successful urban driving includes keeping alert for pedestrians, alleys and cross walks. Anticipate other motorist's actions – expect the unexpected! Always make an eye contact with other motorists to anticipate and communicate movement and/or intentions. If they don't see you, they can't transmit or communicate their intentions.

When driving in urban areas in an emergency mode, your speeds in excess of a posted limit are rarely justified. Excess speed should only be used in extreme cases and **ONLY** if the road conditions permit it. Reasonable speeds allow more time to react and more opportunity to control the emergency vehicle if an evasive action is required.

Urban driving in an emergency mode requires effective use of lights and sirens in order to warn motorists and pedestrians of the approaching emergency vehicle and to clear traffic and/or help the operator negotiate through heavy or blocked traffic. The typical motorist's reactions to lights and sirens will generally be to try to pull to the right and slow down or stop when they detect and approaching emergency vehicle. Some motorists, however, will do senseless, unexpected things. Some of the possibilities are: stopping in the middle of a lane, blocking the emergency vehicles forward progress, trying to compete (race) with the responding vehicle, or beat the emergency vehicle to and/or through an intersection. In some cases they do nothing at all and just keep traveling. Contributing factors to this could be that the radio or air conditioner is on and/or failure of the driver to check the rear-view mirror.

Backing off the siren and giving the other driver a chance to think and react is the best way to handle confused motorists. Tap the horn or flash the vehicles lights to try to establish eye contact. When following an automobile, beware of startling an unsuspecting motorist. They could respond hazardously.

Vary the siren pitch and duration; use headlights, horn, siren, or spot light to get their attention. Be patient, keep signaling. Try and avoid passing on the right, unless it's the only way. Do not cross double solid lines to pass or avoid stopped traffic. The law does not allow for this and if the emergency vehicle collides with oncoming traffic, the emergency vehicle driver will be held accountable.

Traffic blockages are unavoidable, particularly during rush hour. In these situations route planning, including alternate rush hour routes is essential. If traffic is blocked, slow down before reaching the blockage. This will give the emergency vehicle operator a better view and make it easier to detect what effect the signaling equipment is having on the other motorists. Use the siren intermittently and be patient. If traffic is unable to move, it does no good to keep the siren wailing constantly. Everyone involved is likely to become irritable and impatient.

## NEGOTIATING INTERSECTIONS

Intersections are the most accident likely areas. There are two types of intersections: an *uncontrolled intersection* is any intersection that does not offer a control device (stop sign, yield sign, or traffic signal) in the direction of travel of the emergency vehicle; or when a traffic signal is in the green mode for the emergency vehicle. A *controlled intersection* is defined as any intersection that the vehicle must stop at, including stop signs and traffic signals. Some things to keep in mind for each are:

### Uncontrolled

- Scan the intersection for possible hazards (right turn on red, pedestrians, vehicles traveling very fast, etc.). Observe traffic in all four directions.
- Slow down and cover the brake pedal with your foot.
- Change the siren cadence not less than 200 feet from the intersection.
- Avoid using the opposing lane of traffic, if at all possible.

### Controlled

- Do not rely on warning devices to clear traffic.
- Scan the intersection for possible hazards as well as alternatives.
- Begin to slow down well before reaching the intersection and cover the brake with your foot.
- Change the siren cadence not less than 200 feet from the intersection.
- Scan the intersection for possible passing options (pass on the right, left, wait, etc.). Avoid using the opposing lane of traffic, if at all possible.
- Come to a **complete stop**.
- Establish eye contact with other vehicle drivers; have partner communicate all is clear; reconfirm all other vehicles are stopped.
- Proceed one lane of traffic at a time. Treat each lane of traffic as a separate intersection.

Some techniques best used for intersections are basic but can prevent many accidents. Before crossing an intersection, the vehicle operator must make sure there is an adequate gap in traffic. From a full stop a small vehicle needs about four to seven seconds to cross an intersection 30 feet wide (two lanes). For larger vehicles, the time increases according to size, accelerative capability, etc. Cars approaching from either direction should be at least six seconds from the intersection. The vehicle operator should look left, then right, then left and straight ahead before crossing an intersection. When making a right turn at an intersection from a stop it takes about six seconds to turn right and accelerate to a speed of 30 mph. This time increases with the size of the vehicle. When the driver begins the turn, any vehicle approaching the intersection from the left should be at least eight seconds away from the intersection. This will allow the approaching vehicle two seconds of space between the two vehicles. Left turns at intersection require a larger gap than right turns because of the need to cross traffic lanes. Ten seconds is the minimum safe time needed.

When moving through an intersection while responding on an emergency, the vehicle operator should provide as much information as possible to other motorists. Use all means of signaling – lights, sirens, turn signals, lane position, and eye contact or hand signals. Signal the emergency vehicles intent at least one block in advance of an urban intersection and five seconds in the country. **Maryland law refers to 100' and 200'.** Check for traffic control indicators in advance of intersections, such as lane markings, signals, stop or yield signs, and crosswalks.

It's important to check for hazards well in advance of intersections. Make sure the vehicle operator's and officer's windows are partly open. This will enable detection of other emergency vehicles and traffic. Stay especially alert and search for actual hazards such as bad road surfaces and other motorists in the traffic lane, potential hazards like bicyclists or pedestrians, and finally for crossing traffic.

## TURNING VEHICLES AROUND

Any type of turnabout can create a hazardous situation when performed on a street. Generally, the fastest way to turn around is to use reverse but remember to always use a spotter. In congested areas, going around the block may not only be safer, but also faster! Choosing a safe location to turnabout is important; choose an area with good visibility. You should have a clear view of the entire path of travel and all traffic lanes. Avoid hills, curves, and blind intersections.

The types of turnabouts, in order of increased hazard potential, include the U-turn, the two-point turn, and the three-point turn.

- The *U-turn* is the least hazardous type of turnabout. It is the easiest to perform but requires a wide roadway and good visibility.
- The *two-point turnabout* is made when the road is too narrow or restricted visibility won't permit a U-turn. The type of turnabout made depends on whether there is a side road or alley. The left side-road turnabout is more hazardous than the right. It should be a common practice not to use driveways to turnabout in because they may not support the weight of the larger emergency vehicles.
- The *three-point turnabout* is the most hazardous. It should only be used when the road is too narrow for a U-turn, there are not any alleys or side roads on either side, or if traffic is light.

In turnabouts in the emergency mode, if any exemptions are being exercised (e.g. U-turn where illegal) emergency-signaling equipment must be activated. The emergency mode may dictate performing more hazardous types of turnabouts. Always use regular signaling equipment, as well as emergency signaling devices.

## SAFE FOLLOWING DISTANCES

A safe following distance means being able to stop safely without hitting the vehicle ahead if it stops suddenly. Rear-end collisions result from driver inattention to time and distance requirements. The law places the responsibility to maintain alertness and proper vehicle spacing on the following vehicle and its operator. If the proper distance is observed, left and right lateral evasive and other abrupt anti-collision maneuvering is minimized and unnecessary. Emergency vehicles are considerably larger in size, mass, and weight than smaller passenger conveyances, and require longer stopping distances when traveling at high speeds, especially during responses.

To accurately determine safe following distances, some factors need to be identified. First, *reaction distance* is the distance a vehicle travels from the time the driver perceives the need to stop until brake pedal movement begins. Average drivers require about  $\frac{3}{4}$  to 1 second. Factors influencing reaction time are driver alertness and visual scanning. The driver's ability to perform under stress and the driver's experience are also factors that influence reaction distance. The distance traveled in  $\frac{3}{4}$  to 1 second will be greater at higher speeds. Second, *braking distance* is the distance traveled from the first brake pedal movement until the vehicle comes to a full stop. There is no average braking distance. Vehicle speed, velocity, momentum, and inertia (higher speed = greater braking distance) as well as vehicle weight (heavier vehicles tend to require greater stopping distances) all affect the braking distance. Vehicle condition



(brakes, tire tread), road surfaces, and road conditions (wet, icy, rutted) are also factors that affect braking distance.

An appropriate following distance will allow enough time to come to a full stop if the lead vehicle panic stops. A safe way to determine following distance for an emergency vehicle is the four second rule. The four second rule keeps a separation of at least four seconds between the emergency vehicle and the vehicle being at 40mph. For each additional 10mph another 1 second is added to the time. In adverse weather conditions, add another 1 second per 10mph to the time. To begin the count, pick a stationary object and as soon as the vehicle in front as passed it start counting 1001, 1002, etc. You stop counting when your vehicle reaches the same marker.

Common sense must prevail in determining when to increase following distances. Time and spacing requirements are predicated on the speed and conditions the emergency vehicle is traveling and operating in. Traffic density or volume, road surface conditions, hazards, roadway design, and speed limits influence the following and stopping distances. When conditions get bad, add more distance. The larger and heavier the vehicle is, the harder it will be to stop, and the stopping distance will be greater.

## **PASSING ANOTHER VEHICLE**

Often it is necessary for the emergency vehicle to pass other vehicles. At highway speeds (40 to 60 mph), a safe pass can be completed in about 10 seconds. The emergency vehicle will travel about 1/6 of a mile (825 feet) at 55 mph during that 10-second period. The rule of thumb for passing and visibility distance is:

<b>Starting Speed</b>	<b>Passing Distance</b>	<b>Visibility Distance</b>
30 mph	450 ft	900 ft
35 mph	525 ft	1050 ft
45 mph	675 ft	1350 ft
55 mph	825 ft	1650 ft
60 mph	900 ft	1800 ft

There are some considerations that should be taken into account before initiating passing. They are as follows:

- Is it necessary to pass under emergency / non-emergency conditions?
- Is there a pressing need to "get around" the vehicles ahead, or is it related to driver impatience?
- Will vehicle traffic ahead move to the right in response to your audible/visual warning devices, negating the need for passing?
- Can it be done safely?
- Does the vehicle being driven respond to increased power demands or does it react in a sluggish manner?

Road information is critical to successful passing. Look for informational signs (No Passing, Intersection Ahead, etc.), road markings (solid centerline, broken centerline, etc.), road configurations (hills, curves, intersecting roads, etc.). If "No Passing" is advised, there is a good reason, such as a hidden driveway, schools, damaged roads, or poor road design. A pass should never be made on a stretch of road where there are intersecting roads or driveways. Never pass a stopped car or line of cars without first finding out why they are stopped. Remember that many passing situations are potentially hazardous and involve some risk. Most motorists will attempt to pull over when confronted with a responding emergency vehicle. If the vehicle must pass the operator should do an evaluation of risk vs. benefit. In the emergency mode, the gain (saving a life) may justify increased risk. When conditions are ideal, there is a very little risk. In any situation avoiding mishaps is optimal. The following are some good tips to avoid mishaps when passing:

- If decision has been made to pass, and conditions are ok, DON'T HESITATE, conditions could deteriorate.
- Stay in the passing lane the shortest time possible.
- Constantly scan the roadway for unmarked, intersecting roadways.
- Be prepared to abort if conditions deteriorate. Most vehicles can slow up more rapidly than they can accelerate.
- Unless fully abreast of another vehicle, it is often safer to pull behind than to try accelerate.

## **EXPRESSWAY OPERATIONS**

The term expressway includes interstates, freeways, turnpikes, or any other type of limited access multi-lane highway. Entering and exiting expressways are maneuvers that place a big demand on the operator to make fast, accurate decisions in rapid succession. Driving at or above the posted speed limit requires constant awareness of the road and traffic environment. Entering and exiting expressways is generally accomplished via "cloverleaves". Cloverleaf intersections can be one of the most difficult things to accomplish

safely. One group of vehicles is slowing down to exit while another set is accelerating to enter. The two groups must cross in the right most lanes. Whether entering or exiting the cloverleaf, you should be prepared to stop in the event the vehicle in front of you stops suddenly. The most important things to remember when entering or exiting a cloverleaf are:

- Constantly use your mirrors.
- Always be prepared to stop suddenly.
- Look well in advance of your current position.
- Get in and out of the right most lane as quick as possible
- Adhere to ramp speed limits. They are generally on curves that can cause rollover.

Emergency operations on expressways are similar to rural roads with a few exceptions. Use of lights and sirens should be avoided on entrance ramps so that motorists won't become confused. Make a normal entry, assess traffic flow conditions, and choose a lane for an emergency run or high-speed operation before activating lights and sirens. Avoid weaving from one lane to another. Motorists may be unaware the vehicle is in the emergency mode if there is low sun or glare which may interfere with the emergency lights.

## DRIVING AT HIGH SPEEDS

The practice of driving at speeds in excess of the posted limit is generally not recommended; however, if you chose to exceed the posted limits you should have already done a *risk vs. benefit analysis* and have chosen the need to exceed the posted limits. In all cases, there are some primary rules that should be adhered to:

- Negotiate a curve slower than what the yellow warning sign indicates is a safe speed for the curve.
- Observe posted speed limits.
- Allow for conditions that make a lower speed necessary, e.g., wet pavement, ice, traffic conditions etc.
- Avoid heavy or excessive braking action that may lead to brake fade.

In turns, centrifugal force quadruples as speed doubles. When the centrifugal force is high enough the vehicle cannot follow the curve on the intended track. For any curve, there is a maximum speed for traveling through the curve safely. The tighter the curve, the slower the vehicle must travel. If speed in a curve is too great, physics will win and the vehicle will become out of control. A properly designed curve should slant downward to the inside of the curve. Some older roads are banked the opposite way. Some are crowned in the middle. The operator should be as familiar as possible with the road design in their response areas. Road construction plays a role in the traction a vehicle

maintains in a curve. If the road is cracked and decaying the traction is reduced. The surface material (asphalt or concrete) is a factor. Vehicles don't have nearly as much traction on blacktop roads as they do on concrete. Bumpy roads reduce the amount of surface contact between the tires and road that will reduce traction in the curve.

Due to land availability or restrictions, designers often lay out curves in a decreasing radius pattern. This is a design by which the turns start out with a relatively large radius (curve) that tightens as the vehicle passes through the curve. On decrease radius curves, the maximum entry speed is too fast for the later (tighter) portion of the curve. If the speed is too high for the tighter portion of the curve, physics will win and vehicle control will be impossible. When approaching a decreasing radius curve, the driver should elect an appropriate entry speed for the entire curve. The speed cannot be selected, unless the road configuration is known in advance. Know the area!!! The entire curve must be considered before negotiating a curve. There are three points which are critical in negotiating curves; 1) Proper speed and vehicle position for entry to curve; 2) Maintaining control in the curve; and, 3) Proper speed and vehicle position for transitioning through the curve. To better define the safe mechanics of transitioning a curve, the following is a breakdown of a curve and proper techniques to pass through it.

**Entry** – Brake or decelerate to the proper entry speed *before* entering the curve. Enter the curve as far to the outside as possible. Entering on the outside of the curve effectively increases the radius of the track for the vehicle. The greater the radius, the faster the turn can be safely negotiated. Begin the turn as early as possible.

**Transition** – If the maximum safe speed to maintain control passing through a curve has been attained, the emergency vehicle operator experiences full control of the vehicle. The maximum "safe" speed is not the maximum "possible" speed that conditions will allow. When approaching maximum possible speeds, it will feel as though the suspension is straining. Do not apply aggressive braking. Allow natural friction of the engine and compression to slow the vehicle down. In a curve, vehicle control becomes so critical that a relatively small event (e.g. some sand or gravel on the road) can cause complete loss of control. Once in the curve, coast a speed to maintain traction and friction. Apply power carefully. TO much power can result in loss of steering control and cause the rear wheels to spin and lose rear end traction.

**Exiting** – Exiting curves require the vehicle operator to keep the vehicle's speed slow and steady. Maintain position on the inner surface of the curve. Exiting to a straightaway requires the operator to maintain lane positioning. Gently accelerate out of the curve after the apex has been reached and the vehicle is on a straight path.

It should be revisited that stopping at higher speeds require more stopping distance and is harder on the braking systems. Here are some basic techniques for stopping from a high speed:

- Laws of physics, particularly generation of heat in reducing speed, are operating on brakes.
- Overdo it and the physics will make the vehicles brakes useless. Don't abuse brakes; mechanical devices will fail.
- Be particularly cautious of long down hill grades. Use a lower gear to hold speed down rather than using the brakes. Select a gear before standing a descent.
- Proper high-speed braking techniques depend on the kind of brakes the emergency vehicle has. For either disc or drum brakes, it is not advisable to lock up the wheels. The stopping distance will be increased with locked wheels and the directional control will be lost.
- Use the right foot for braking. When a stop is imminent, "cover" the brake with the right foot. Don't risk brake fade by riding the brake.

## **HANDLING UNUSUAL AND DANGEROUS DRIVING SITUATIONS**

### **Driving In Adverse Conditions**

Civilian drivers usually choose when and under what conditions they drive. Unfortunately, the emergency vehicle driver must operate whenever an incident occurs. Many times this involves adverse conditions. Typically, adverse conditions can be classified in terms of:

- Traction Implications
- Adverse Handling Implications
- Vision Implications

If these adverse conditions cannot be adequately handled or if other unexpected situations occur, the emergency vehicle driver may need to initiate crash avoidance procedures. Emergency drivers must adjust their driving techniques for all adverse conditions. The driver's primary responsibility is the safety of the passengers and arriving safely at the incident. Slow down and drive at a speed reasonable and appropriate for the conditions. Increase following distances and drive smoothly with any vehicle to avoid sudden and dramatic maneuvering. Prioritize the response and use common sense!

**Traction Implications** – The traction of a vehicle is adversely affected by a variety of environmental conditions. These include rain, snow, ice, high winds and/or leaves on the roadway.

- Rain – In addition to oil buildup, water forms a layer that builds between the tires and the road surface. As little as 1/16<sup>th</sup> of water can cause hydroplaning of a vehicle. Standing water may also impact steering, braking, and general vehicle operation.
- Snow and Ice – Snow and ice form an extremely slippery road condition resulting in reduced traction for vehicle tires. Also, certain features such as bridges may experience snow or ice prior to the road surfaces.
- Leaves – In many areas large amounts of leaves accumulate on the road surface. They can result in slippery conditions equal to snow or ice when they become wet.

Whenever conditions have caused reduction in traction, the driver must reduce speed: and, steer, accelerate, or brake smoothly and evenly. The required stopping distances multiply depending on the condition of the road surface.

**Adverse Handling Implications** – Adverse handling could be caused by natural implications such as high winds, and trees or general ground terrain. Road construction and design or some man made implications. Again, reduce speed and maintain control of the vehicle.

**Vision Implications** – Conditions that affect the vision of the driver include night driving, precipitation, the vehicle, and the condition of the driver.

- Night Driving – Driving at night increases the potential for problems because of factors such as: hidden hazards; increased difficulty in judging the speed of other vehicles, and distance; limited highway lighting; and glare from roadside lights. Even with these limitations and possibly impaired vision, a few simple rules can help the driver compensate.
- Dim dash and cab lights.
- Reduce speed.
- Keep headlights and windshield clean.
- Watch area beyond headlights.
- Keep eyes moving and scan continuously.
- Precipitation – Rain, fog, and snow reduce visibility. In addition, rain and fog increase glare both during the day and at night. During the day when the sun is out, the snow on the ground creates a considerable glare as well. It is imperative that the vehicle be kept under strict speed control. Poor visibility conditions require the operator to:
  1. Drive slowly but keep moving.
  2. Turn headlights (low beams only) and wipers on.
  3. Use four way flashers if traveling 15 mph or more below the posted speed limit.
  4. Watch for cars ahead that are moving very slowly.
  5. Avoid decelerating suddenly.
  6. If you must pull off the road, use four way flashers.
  7. Do not pass.

8. Use the defroster or air conditioning to minimize fogging on the inside of the windows.

## CONTINGENCY SITUATIONS – CAUSES AND PREVENTION

Contingency situations can arise at any time. A contingency situation is described as a possible future event, condition, or an unforeseen occurrence that may necessitate special measures. It is something that is liable to happen as chance as a chance feature or accompaniment of something else (Webster's Third New International Dictionary, 1993). When they arise, normal traffic flow may be suddenly interrupted and the safety of all persons in the general area is diminished. It is a good policy to be familiar with contingency situations that occur most often, and to understand the actions that can be taken to minimize the likelihood of death or injury. The five primary causes of contingency situations are:

1. *Vehicle malfunction of component failure* – There are a number of things the operator can do to prevent vehicle malfunctions or component failures. Inspect the vehicle at the beginning of every shift and correct any deficiencies noted at that time. Correction is the best prevention.
2. *A sudden change or deterioration in the road* – When there is a sudden change or deterioration in the road conditions (weather, damage, construction, etc.) remain alert, scan well ahead, and look for clues like construction signs or skid marks on the road.
3. *The appearance of an obstacle in the roadway* – Be prepared for an appearance of obstacles in the road (e.g. pedestrians, other vehicles, animals, etc.). Maintain a safe and controlled speed. Watch for obvious clues like children playing or bikes near the road.
4. *A sudden change in the weather* – Road conditions change very rapidly with precipitation. Look for icy patches and remember it takes very little water on the road surface to cause a sliding situation.
5. *Driver error, inattention, and inexperience* – Begin the shift well rested with no unusual physical or mental impairment. Remain alert, know the vehicle characteristics, avoid unnecessary risks, and most of all don't panic if change occurs.

## HANDLING CONTINGENCY SITUATIONS

Since vehicle operators may spend many hours driving under unusual situations, it is probable that sooner or later an unusual situation will occur. The best way to minimize the impact is to be as prepared as possible and comfortable with the evasive maneuvers available.

Such actions as evasive steering, or sudden and extreme changes in the vehicles direction, are often used to avoid pedestrians, animals, vehicles, or other obstacles. These actions are usually done because it is too late to brake to a stop. The driver needs to weight the action vs. outcome of the contingency. Is it safer to collide with a small animal rather than risk losing control due to a sudden steering or braking maneuver?

The vehicle driver must scan ahead along the roadway; shoulders and/or median to identify any potential escape routes, which can be safely used to avoid a crash. Scan carefully when approaching the crest of a hill, rounding a curve, and when approaching intersections. These situations minimize possible escape routes.

Evasive steering is used to avoid a collision or minimize the impact of a collision. Hands should be at the 9 and 3 o'clock position on the steering wheel. This will allow the largest possible turn without moving the hands. The 10 and 2 o'clock positions are more comfortable, but the 9 and 3 o'clock position allows maximal directional control. To avoid a collision, turn the steering wheel sharply in the direction of the escape route and counter steer as soon as the vehicle is clear of the obstacle. When one is sure that a collision is unavoidable, choose an object with which to collide. Always choose the course least likely to result in a serious accident. Head-on collisions are the most damaging collisions. Attempt to sideswipe or brush another object. Impact absorbing objects are better to choose than large immobile items that will not "give". Some examples of impact absorbing objects are parked cars, bushes and shrubs, and small signs. Examples of nonimpact-absorbing objects include concrete abutments, buildings, large trees, and utility poles. All collisions are preventable and therefore avoidable. They occur when the vehicle operators aren't paying attention to the roadway dynamics, other vehicles, and/or the rules of the road.

Although sometimes it may be necessary to brake, hard braking should be avoided. Hard braking can lock the wheels; locked wheels won't steer. Rear wheels tend to lock before the front wheels. Locked rear wheels tend to seek the front (skid). Slow down and maintain control. With passenger vehicles very abrupt maneuvers are possible unless the wheels will hit the curb, a rut, etc. However, skidding, yawing, and other loss of control scenarios will occur if conditions arise. A large vehicles steering ratio usually precludes excessively abrupt maneuvers.

In addition to evasive steering, there are two other forms of maneuvering to avoid collisions – *emergency braking and evasive acceleration*.

- *Emergency braking* – The goal for emergency braking is to produce the shortest possible stopping distance without locking the wheels or losing control. The threshold braking method for accomplishing this is hard pressure to the brake pedal without locking the wheels. Modulate the



pressure on the pedal. Apply steady pressure to the point of locking, and then release pressure slightly to get rolling traction. If the wheels lock, **release the brake pedal**. A vehicle with ABS does not require threshold braking because the computer will not allow the brakes to lock up; a steady pressure should be maintained on the pedal. Remember that a rapid stop could cause a rear-end collision; however, this is more preferable than hitting a pedestrian. Remember the action vs. outcome formula.

- *Evasive acceleration* – Evasive acceleration means a quick burst of speed. It can be used to avoid collision with side approaching or merging vehicles. When a vehicle is approaching from the side or merging, increasing speed can often avoid a side impact collision.

## HANDLING SKIDS

There are many reasons for skids; however, these are the primary ones:

- A too-sudden change of speed or direction.
- Any change of speed or direction under conditions of poor traction.
- Sudden shift in weight dynamics.
- Poor tire tread.
- Improper tire inflation.
- Driver inattention.
- Improper application of the braking system.

TO help regain control no matter what type of skid is occurring, **STAY OFF THE BRAKE; STAY OFF THE ACCELERATOR; AND COUNTERSTEER!** Steer in the direction to which the rear end of the vehicle is skidding. There are two points about counter steering: 1) the steering wheel does not have to be turned violently to correct a skid. This a common "panic" reaction, and further trouble arises because the rear tends to skid back and forth (fishtailing); 2) Once the wheel has been turned to counter-steer, it may be necessary to immediately counter steer in the other direction to help recover.

There are four basic types of skids. The following will describe them and methods of recovering from them:

- **Braking skids** – This skid occurs when sudden, hard brake pressure is applied causing one or more of the vehicles to lock. If the brakes are properly adjusted then all wheels should lock at the same time. Regardless of how many wheels lock, steering control will be lost. If all wheels lock evenly or if just the front wheels lock, the vehicle will move straight ahead, unless influenced by some other force (e.g. a dip in the road). If just the rear wheels lock, their reduced traction will cause them to move forward faster than the front wheels. The vehicle may spin 180

degrees. The vehicle may actually end up traveling in the opposite direction. The following actions should be taken if braking skid occurs:

- Release the brakes immediately; it should then be possible to steer. Releasing the brakes allows the wheels to turn.
- If braking is still necessary, apply with less pressure so that the wheels don't lock again.

- **Power skid** – The power skid occurs due to sudden, hard acceleration. Since the power skid is delivered only to the rear wheels, sudden acceleration can cause the rear wheels to lose traction. The back of the vehicle may skid to one side, trying to overtake the front end. The tendency for the rear end to slide will be greatest if the front wheels are turned. The vehicle may even spin all the way around. To control this:

- Ease off the accelerator.
- Steer in the direction towards which the rear end of the vehicle is skidding.
- Counter steer to set the vehicle straight.
- Keep the front end up front.
- Steer in the direction you want to go.

- **Cornering Skids** – Cornering skids (also called yaw skids), occur when speed is too great or traction is reduced (due to poor road/weather conditions) such that the vehicle cannot stay on the intended track around a curve. This is primarily seen at exit ramps from highways. The cornering skid can even occur at normal speeds if the traction is reduced by tire or road surface conditions. The vehicle may continue on a straight path and not on the intended path around the curve. In a full cornering skid all four wheels lose traction. The rear end of the vehicle may try to overtake the front end of the vehicle if just the rear wheels lose traction. This is sometimes called a "spin-out". Actions to take if a cornering skid occur are:

- Ease off the accelerator.
- If the vehicle is spinning out, counter steer as space permits. This will align front and rear wheels and control may be regained.

- **Hydroplane Skids** – Hydroplane skids occur when the tire is moving too fast for the water on the road to escape (to flow around it or through the tread). Hydroplaning can occur on minimally wet surfaces at speeds of 25 mph. A small wedge of water builds up in front of the tire and lifts it off the road surface. The results of a hydroplane skid are hard to predict. As in all skids, there is loss of braking and/or steering control and unless the driver attempts to brake or steer (other than straight ahead) the driver may not know the vehicle is hydroplaning. Actions to take if hydroplaning occurs:

- Release brake and/or accelerator.
- Allow the vehicle to decelerate. The weight of the vehicle will drop through the water barrier and recontact the road surface.

Remember: Speed initially causes hydroplaning; the second cause is tire and tread.

## HANDLING OTHER VEHICLE EMERGENCIES

There are a number of other emergencies that can occur to the vehicles we use. The following are some possible emergencies and ways to control them:

- **Rapid Tire Deflations** - With rapid tire deflation, front-end occurrences are the most dangerous. The vehicle will pull to the side of the blowout or deflated tire. The driver should remove their foot from the accelerator, allowing the vehicle to slow gradually. Hold the steering wheel firmly; anticipate difficult steering. When the steering is controlled, brake lightly; avoid aggressive braking techniques. The vehicle will pull to the side of the deflated tire because the flat tire grips the road with more rubber (and more friction) and acts as a pivot. Aggressive braking will cause the rear of the vehicle to swing/skid around 180 degrees.
- **Brake Failure (conventional brakes)** - Brake failure in conventional systems generally results in negligence of the system, which in turn leads to failure. If failure occurs, let off the accelerator and pump the brake pedal rapidly. This might build up enough pressure (fluid) in the system and provide minimal braking action. If applicable leave the Jake brake / retarder system engaged. Down shift to the lowest gear on gear at a time. Additionally, apply the parking brake system pumping firmly, holding the release mechanism to prevent rear wheel lockup. As a last resort, as the vehicle slows, rub the tires against a curb for additional friction. If all else fails, look for an appropriate escape path.
- **Brake Failure (ABS/Air brakes)** - Anti-lock braking systems (ABS) are operated by a computer system. The computer rapidly applies the pumping action/friction to the pads faster than a human can with the foot. When ABS systems fail, the vehicles parking brake system reverts to conventional for the most part. However, initially, **do not pump an ABS system**. This will confuse the computer if the system is still functioning, and will not allow for even/smooth braking to occur on all four wheels. Apply firm pressure and hold in place. Down shift to the lowest gear on at a time, to slow the vehicle down. Leave the retarder system engaged. Again as a last resort rub the tires along the curb to slow the vehicle and if that fails look for an escape route. Never pump the brakes if the vehicle has air brakes. Air-brake failures are generally caused by an air-line failure or component failure. Pumping the brakes exhausts the remaining air more rapidly.
- **Transmission Malfunctions** - Transmission failures are rare in nature unless the driver shifts into reverse or park while driving. Most new apparatus as an electronic transmission that won't allow for those occurrences. Basically, vehicle operators will experience early indications

of trouble in the transmission (e.g. slipping, thrusting etc.). In these situations place the unit out of service and have a mechanic look at it.

- **Steering Malfunctions / Failures** - Power steering system failure is the most common. A power-steering failure occurs when the engine stalls, fluid in the system is low, or when the belt that drives the system flips or brakes. Regardless, the steering mechanism will still work, but it will require considerable effort to steer the vehicle. Complete failure of the steering system seldom occurs. IF complete failure occurs, release the accelerator, downshift to the lowest gear, and bring the vehicle to a stop.
- **Accelerator Sticks** - If the accelerator sticks, the driver should attempt to release the pedal by tapping on it with their foot. IF this fails then the driver should attempt to stick their foot under the pedal and pull it up. This should only be done with the foot and **NOT** the driver's hands. IF that does not solve the problem, put the vehicle in neutral and apply the brakes to slow the vehicle to a stop, downshift to the lowest gear on gear at a time. If the motor is shut down, beware that many breaking and steering systems require the motor to be running. Without the motor running, both of these operations will be more difficult.
- **Impaired Visibility** - If visibility should become impaired (hood flies up, wiper or defroster malfunction, the driver should open their window and stick their head out to see where the vehicle is going. Apply the brakes slowly as not to cause a rear-end collision and pull off the road.
- **Wheels of the Road** - If the wheels were to leave the road surface, the driver will have to perform an off-road recovery. When the wheels have left the road, hold the steering wheel firmly as the vehicle may pull to one side. Reduce speed by releasing the accelerator. If the brakes must be applied, they should be done so very gradually.
- **Danger Signals** - There are many forms of "danger signals" the driver should be aware of and be able to take the appropriate action to minimize or correct the problem. It is important to remember that if responding on an emergency incident and the vehicle has a malfunction, a replacement unit should be requested immediately as not to delay the assistance longer than it has to. Some danger signals to be aware of are:
  - Fuel gauge – loss of fuel or not proper quantity to start.
  - Charging system – If this fails, (battery not charging); turn off any equipment that will drain the battery. If the motor is stopped it is unlikely to start again.
  - Brake warning light – Stop immediately. If there is a complete brake failure, use the procedure outlined in the brake failure section listed previous.
  - Oil pressure - If it drops, stop the vehicle immediately. Do not drive until maintenance has been performed.
  - Engine temperature – If it rises into the danger zone (and remains), stop immediately and do not drive the vehicle until maintenance is performed.